


DC POWER SUPPLY
BENCH SERIES, MODEL 6217A
SERIAL NUMBER PREFIX 7H

OPERATING AND SERVICE MANUAL

HEWLETT
PACKARD  HARRISON
DIVISION



CERTIFICATION

The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.

WARRANTY AND ASSISTANCE

All Hewlett-Packard products are warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery, or, in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period. No other warranty is expressed or implied. We are not liable for consequential damages.

For any assistance contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

DC POWER SUPPLY
BENCH SERIES, MODEL 6217A
SERIAL NUMBER PREFIX 7H

Printed: August, 1967

Ⓜ Stock Number: 06217-90001

TABLE OF CONTENTS

Section	Page No.	Section	Page No.
I GENERAL INFORMATION	1-1	IV PRINCIPLES OF OPERATION (CONTINUED)	
1-1 Description	1-1	4-6 Feedback Loop	4-2
1-5 Specifications	1-1	4-11 Series Regulator	4-2
1-7 Options	1-1	4-13 Constant Voltage Input Circuit	4-2
1-9 Accessories	1-1	4-17 Driver and Error Amplifier	4-3
1-11 Instrument Identification	1-1	4-20 Current Limiting Circuit	4-3
1-14 Ordering Additional Manuals	1-1	4-22 Reference Circuit	4-3
		4-26 Meter Circuit	4-3
II INSTALLATION	2-1	V MAINTENANCE	5-1
2-1 Initial Inspection	2-1	5-1 Introduction	5-1
2-3 Mechanical Check	2-1	5-3 Cover Removal and Replacement	5-1
2-5 Electrical Check	2-1	5-6 General Measurement Technique	5-1
2-7 Installation Data	2-1	5-11 Test Equipment Required	5-2
2-9 Location	2-1	5-13 Performance Test	5-3
2-11 Rack Mounting	2-1	5-15 Rated Output and Meter Accuracy	5-3
2-13 Input Power Requirements	2-1	5-18 Load Regulation	5-3
2-15 Connections For 230 Volt Operation	2-1	5-20 Line Regulation	5-4
2-17 Power Cable	2-2	5-35 Output Impedance	5-6
2-20 Repackaging For Shipment	2-2	5-38 Current Limit	5-7
		5-40 Transient Recovery Time	5-7
III OPERATING INSTRUCTIONS	3-1	5-46 Troubleshooting	5-8
3-1 Turn-On Checkout Procedure	3-1	5-48 Trouble Analysis	5-8
3-3 Operation	3-1	5-53 Repair and Replacement	5-11
3-5 Constant Voltage	3-1	5-55 Adjustment and Calibration	5-13
3-7 Changing Current Limit	3-1	5-57 Meter Mechanical Zero	5-13
3-9 Connecting Load	3-1	5-59 Meter Calibration	5-13
3-12 Operation of Supply Beyond Rated Output	3-2	5-61 Zero Volts Output Adjustment	5-13
3-14 Optional Operating Modes	3-2	5-63 Reference Circuit Adjustment	5-13
3-15 Series Operation	3-2	5-66 Output Current Limit Adjustment	5-14
3-17 Parallel Operation	3-2	VI REPLACEABLE PARTS	6-1
3-19 Special Operating Considerations	3-2	6-1 Introduction	6-1
3-20 Pulse Loading	3-2	6-4 Ordering Information	6-1
3-22 Output Capacitance	3-2	Reference Designators	
3-24 Reverse Current Loading	3-2	Abbreviations	
		Manufacturers	
IV PRINCIPLES OF OPERATION	4-1	6-8 Code List of Manufacturers	6-2
4-1 Simplified Discussion	4-1	Parts List Table	
4-5 Detailed Circuit Analysis	4-2		

TABLE OF CONTENTS (CONTINUED)

LIST OF TABLES

Table	Page No.	Table	Page No.
1-1 Specifications	1-2	5-4 Low Output Voltage Troubleshooting	5-10
5-1 Test Equipment Required	5-2	5-5 High Output Voltage Troubleshooting	5-11
5-2 Common Troubles	5-9	5-6 Selected Semiconductor Characteristics	5-11
5-3 Reference, Bias, and Filtered DC Troubleshooting	5-10	5-7 Calibration Adjustment Summary	5-13

LIST OF ILLUSTRATIONS

Figure	Page No.	Figure	Page No.
1-1 DC Power Supply	iv	5-4 Output Current, Test Setup	5-3
2-1 Input Power Transformer Connections	2-1	5-5 Load Regulation, Test Setup	5-4
3-1 Front Panel Controls and Indicators	3-1	5-6 Ripple and Noise, Test Setup	5-5
4-1 Simplified Schematic	4-1	5-7 Noise Spike Test Setup	5-6
5-1 Front Panel Terminal Connections	5-1	5-8 Output Impedance, Test Setup	5-6
5-2 Output Current Measurement Technique	5-1	5-9 Transient Recovery Time, Test Setup	5-7
5-3 Differential Voltmeter Substitute Test Setup	5-3	5-10 Transient Recovery Time, Waveforms	5-8
		5-11 Servicing Printed Wiring Boards	5-12



Figure 1-1. DC Power Supply

SECTION I GENERAL INFORMATION

1-1 DESCRIPTION

1-2 This power supply, Figure 1-1, is completely transistorized and suitable for either bench or relay rack operation. It is a compact, regulated, Constant Voltage/Current Limiting supply. The output voltage can be continuously adjusted throughout the output voltage range. The power supply is fully protected from overloads by a fixed current limit which is set by means of an internal adjustment. The current limit circuit permits series and parallel connection of two or more supplies when greater voltage or current is desired.

1-3 Either the positive or negative output terminal may be grounded or the power supply can be operated floating at up to a maximum of 300 volts off ground.

1-4 A single meter is used to measure either output voltage or output current in volts and milliamps, respectively. The voltage or current range is selected by the METER switch on the front panel.

1-5 SPECIFICATIONS

1-6 Detailed specifications for the power supply are given in Table 1-1.

1-7 OPTIONS

1-8 Options are factory modifications of a standard instrument that are requested by the customer. The following options are available for the instrument covered by this manual. Where necessary, detailed coverage of the options is included throughout the manual.

<u>Option No.</u>	<u>Description</u>
-------------------	--------------------

28	230V, 50-400Hz, Single-Phase Output. Factory modification consists of reconnecting the input transformer for 230Vac operation. Refer to Section II for further details.
----	---

1-9 ACCESSORIES

1-10 The accessories listed in the following chart may be ordered with the power supply or separately from your local Hewlett-Packard field sales office (refer to list at rear of manual for addresses).

<u>Part No.</u>	<u>Description</u>
14521A	3½" High Rack Kit for mounting up to three BENCH supplies. (Refer to Section II for details.)
14522A	7" High Rack Kit for mounting up to six BENCH supplies. (Refer to Section II for details.)

1-11 INSTRUMENT IDENTIFICATION

1-12 Hewlett-Packard power supplies are identified by a three-part serial number tag. The first part is the power supply model number. The second part is the serial number prefix, which consists of a number-letter combination that denotes the date of a significant design change. The number designates the year, and the letter A through L designates the month, January through December respectively. The third part is the power supply serial number.

1-13 If the serial number prefix on your power supply does not agree with the prefix on the title page of this manual, change sheets are included to update the manual. Where applicable, backdating information is given in an appendix at the rear of the manual.

1-14 ORDERING ADDITIONAL MANUALS

1-15 One manual is shipped with each power supply. Additional manuals may be purchased from your local Hewlett-Packard field office (see list at rear of this manual for addresses). Specify the model number, serial number prefix, and ϕ stock number provided on the title page.

Table 1-1. Specifications

INPUT:

105-125Vac, single phase, 50-400Hz.

OUTPUT:

0-50Vdc, 0-200mA.

LOAD REGULATION:

Less than 0.01% plus 1mV for a full load to no load change in output current.

LINE REGULATION:

Less than 0.01% plus 4mV for any line voltage change within the input rating.

RIPPLE AND NOISE:

Less than 200 μ V rms/1mV p-p (dc to 20MHz).

TEMPERATURE RANGES:

Operating: 0 to 55°C. Storage: -40 to +85°C.

TEMPERATURE COEFFICIENT:

Less than 0.02% plus 1mV per degree Centigrade.

STABILITY:

Less than 0.10% plus 5mV total drift for 8 hours after an initial warm-up time of 30 minutes at constant ambient, constant line voltage, and constant load.

INTERNAL IMPEDANCE AS A CONSTANT VOLTAGE SOURCE:

Less than 0.03 ohms from dc to 1KHz.

Less than 0.5 ohms from 1KHz to 100KHz.

Less than 3.0 ohms from 100KHz to 1MHz.

TRANSIENT RECOVERY TIME:

Less than 50 μ sec for output recovery to within 10mV following a full load current change in the output.

OVERLOAD PROTECTION:

A fixed current limiting circuit protects the power supply for all overloads including a direct short placed across the output terminals in constant voltage operation.

METER:

The front panel meter can be used as either a 0-60V voltmeter or as a 0-250mA ammeter.

OUTPUT CONTROLS:

Coarse and fine voltage controls set desired output voltage. Meter switch selects voltage or current.

OUTPUT TERMINALS:

Three "five-way" output posts are provided on the front panel. All power supply output terminals are isolated from the chassis and either the positive or negative terminal may be connected to the chassis through a separate ground terminal located on the output terminal strip.

COOLING:

Convection cooling is employed. The supply has no moving parts.

SIZE:

5 $\frac{1}{4}$ "/13,34cm W x 3 $\frac{1}{4}$ "/8,26cm H x 7"/17,78cm D. Using a Rack Mounting Kit, three units can be mounted side by side in a standard 19" relay rack.

WEIGHT:

5.25 lbs./2,38 kg net; 7 lbs./3,17 kg shipping.

FINISH: Dark Gray.

POWER CORD:

A three-wire, five-foot power cord is provided with each unit.

SECTION II INSTALLATION

2-1 INITIAL INSPECTION

2-2 Before shipment, this instrument was inspected and found to be free of mechanical and electrical defects. As soon as the instrument is unpacked, inspect for any damage that may have occurred in transit. Save all packing materials until the inspection is completed. If damage is found, proceed as described in the Claim for Damage in Shipment section of the warranty page at the rear of this manual.

2-3 MECHANICAL CHECK

2-4 This check should confirm that there are no broken knobs or connectors, that the cabinet and panel surfaces are free of dents and scratches, and that the meter is not scratched or cracked.

2-5 ELECTRICAL CHECK

2-6 The instrument should be checked against its electrical specifications. Section V includes an "in-cabinet" performance check to verify proper instrument operation.

2-7 INSTALLATION DATA

2-8 The instrument is shipped ready for bench operation. It is necessary only to connect the instrument to a source of power and it is ready for operation.

2-9 LOCATION

2-10 This instrument is air cooled. Sufficient space should be allotted so that a free flow of cooling air can reach the rear of the instrument when it is in operation. It should be used in an area where the ambient temperature does not exceed 55°C.

2-11 RACK MOUNTING

2-12 This instrument may be rack mounted separately or with one or two other units that are the same size. The units are placed in the Rack Mounting Frame. The Rack Mounting Frame is then fastened to the rack frame.

2-13 INPUT POWER REQUIREMENTS

2-14 This power supply may be operated continuously from either a nominal 115 volt or 230 volt 50-400Hz power source. The unit as shipped from the factory, is wired for 115 volt operation. The input power required when operated from a 115 volt power source at full load is:

Model 6215A

Model 6217A

2-15 CONNECTIONS FOR 230 VOLT OPERATION (Figure 2-1)

2-16 Normally, the two primary windings of the input transformer are connected in parallel for operation from 115 volt source. To convert the power

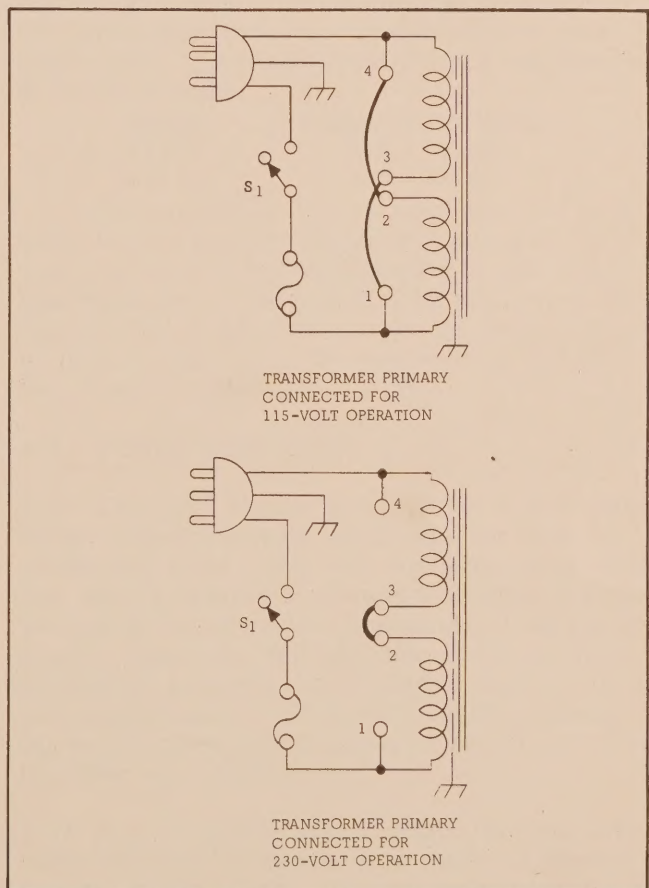


Figure 2-1. Input Power Transformer Connections

supply to operation from a 230 volt source, the power transformer windings are connected in series as follows:

- a. Unplug the line cord and remove the top cover as described in Paragraph 5-3.
- b. Remove the jumpers between taps 4-2 and 3-1. Solder a jumper between taps 3-2 on the input power transformer T1, see Figure 2-1.
- c. Replace existing fuse with a 0.5 ampere, 230 volt fuse.
- d. Replace existing line cord plug with a standard 230 volt plug.

2-17 POWER CABLE

2-18 To protect operating personnel, the National Electrical Manufacturers Association (NEMA) recommends that the instrument panel and cabinet be grounded. This instrument is equipped with a three conductor power cable. The third conductor is the ground conductor and when the cable is plugged into an appropriate receptacle, the instrument is

grounded. The offset pin on the power cable three-prong connector is the ground connection.

2-19 To preserve the protection feature when operating the instrument from a two-contact outlet, use a three-prong to two-prong adapter and connect the green lead on the adapter to ground.

2-20 REPACKAGING FOR SHIPMENT

2-21 To insure safe shipment of the instrument, it is recommended that the package designed for the instrument be used. The original packaging material is reusable. If it is not available, contact your local Hewlett-Packard field office to obtain the materials. This office will also furnish the address of the nearest service office to which the instrument can be shipped. Be sure to attach a tag to the instrument which specifies the owner, model number, full serial number, and service required, or a brief description of the trouble.

SECTION III OPERATING INSTRUCTIONS

3-1 TURN-ON CHECKOUT PROCEDURE

3-2 The following checkout procedure describes the use of the front panel controls and indicators and ensures that the supply is operational:

- a. Set AC toggle switch (1) upward to on position; indicator (2) should light.

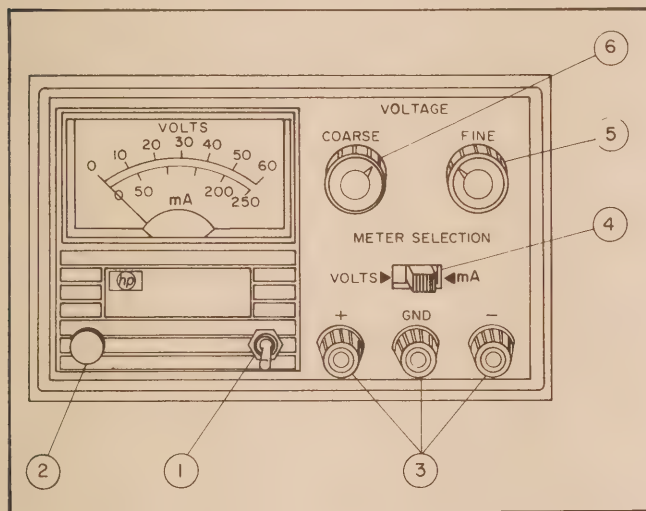


Figure 3-1. Front Panel Controls and Indicators

- b. Set METER SELECTION switch (4) to VOLTS position.
- c. Turn COARSE (6) and FINE (5) VOLTAGE controls fully ccw to ensure that output decreases to 0V, then turn the VOLTAGE controls fully cw to ensure that output voltage increases to the maximum rated output voltage.
- d. Connect a milliammeter across the output of the supply (3) to check that the current limit circuit within the supply is limiting the output current to:

Model	Current Limit
6215A	475 \pm 10mA
6217A	250 \pm 10mA

- e. Remove milliammeter and connect load to output terminals.

3-3 OPERATION

3-4 The power supply can be operated as a single unit (normal operation), in parallel, or in series. The output of the supply can be floated up to 300 volts off ground.

3-5 CONSTANT VOLTAGE

3-6 To select a constant voltage output turn on the supply and, with no load connected, adjust the VOLTAGE controls for the desired output voltage. To check the current limit, connect an external ammeter across the output of the supply, turn the VOLTAGE controls fully clockwise, and observe the reading. The current limit is factory adjusted in excess of the current rating of the supply. If the existing current is not compatible with the anticipated load requirements, the limit can be changed as outlined in the following paragraphs.

3-7 CHANGING CURRENT LIMIT

3-8 The current limit can be varied by adjusting resistor R50, located on the printed wiring board. This adjustment procedure is described in Paragraph 5-66. The range of the current limit control R50 is as follows:

Model	Current Limit Range
6215A	300 - 540 mA
6217A	180 - 300 mA

The current limit is normally adjusted to a value far in excess of the current rating of the supply to prevent the deterioration of line and load regulation. Therefore, if for any reason the current limit is adjusted so that the output current is close to this value, the performance will not meet the published specifications.

3-9 CONNECTING LOAD

3-10 Each load should be connected to the power supply output terminals using separate pairs of connecting wires. This will minimize mutual coupling effects between loads and will retain full advantage of the low output impedance of the power supply. Each pair of connecting wires should be as short as possible and twisted or shielded to reduce noise pickup. (If shield is used, connect one end to power supply ground terminal and leave the other end unconnected.)

3-11 If load considerations require that the output power distribution terminals be remotely located from the power supply, then the power supply output terminals should be connected to the remote distribution terminals via a pair of twisted or shielded wires and each load separately connected

to the remote distribution terminals.

3-12 OPERATION OF SUPPLY BEYOND RATED OUTPUT

3-13 The shaded area on the front panel meter face indicates the amount of output voltage or current that is available in excess of the normal rated output. Although the supply can be operated in this shaded region without being damaged, it cannot be guaranteed to meet all of its performance specifications. However, if the line voltage is maintained above 115 VAC, the supply will probably operate within its specifications.

3-14 OPTIONAL OPERATING MODES

3-15 SERIES OPERATION

3-16 Normal Series Connections. Two or more power supplies can be operated in series to obtain a higher voltage than that available from a single supply. When this connection is used, the output voltage is the sum of the voltages of the individual supplies. Each of the individual supplies must be adjusted in order to obtain the total output voltage. The power supply contains a protective diode connected internally across the output which protects the supply if one power supply is turned off while its series partner(s) is on.

3-17 PARALLEL OPERATION

3-18 Normal Parallel Connections. Two or more power supplies can be connected in parallel to obtain a total output current greater than that available from one power supply. The total output current is the sum of the output currents of the individual power supplies. The output CURRENT controls of each power supply can be separately set. The output voltage controls of one power supply should be set to the desired output voltage; the other power supply should be set for a slightly larger output voltage. The supply set to the lower output voltage will act as a constant voltage source; the supply set to the higher output will act as a current limit source, dropping its output voltage until it equals that of the other supply. The constant voltage source will deliver only that fraction of its total rated output current which is necessary to fulfill the total current demand.

3-19 SPECIAL OPERATING CONSIDERATIONS

3-20 PULSE LOADING

3-21 The power supply will automatically cross

over from constant voltage to current limit operation in response to an increase (over the preset limit) in the output current. Although the preset limit may be set higher than the average output current high peak currents (as occur in pulse loading) may exceed the preset current limit and cause crossover to occur. If this crossover limiting is not desired, set the preset limit for the peak requirement and not the average.

3-22 OUTPUT CAPACITANCE

3-23 An internal capacitor, across the output terminals of the power supply, helps to supply high-current pulses of short duration during constant voltage operation. Any capacitance added externally will improve the pulse current capability, but will decrease the safety provided by the current limiting circuit. A high-current pulse may damage load components before the average output current is large enough to cause the current limiting circuit to operate.

3-24 REVERSE CURRENT LOADING

3-25 Active loads connected to the power supply may actually deliver a reverse current to the power supply during a portion of its operating cycle. An external source cannot be allowed to pump current into the supply without loss of regulation and possible damage to the output capacitor. To avoid these effects, it is necessary to preload the supply with a dummy load resistor so that the power supply delivers current through the entire operating cycle of the load device.

3-26 Reverse Voltage Protection. A diode is connected across the output terminals with reverse polarity. This diode protects the output electrolytic capacitors and the series regulator transistors from the effects of a reverse voltage applied across the output terminals. For example, in series operation of two supplies, if the AC is removed from one supply, the diode prevents damage to the unenergized supply which would otherwise result from a reverse polarity voltage.

Since series regulator transistors or driver transistors cannot withstand reverse voltage, another diode is connected across the series transistor. This diode protects the series transistors in parallel or Auto-Parallel operation if one supply of the parallel combination is turned on before the other.

SECTION IV PRINCIPLES OF OPERATION

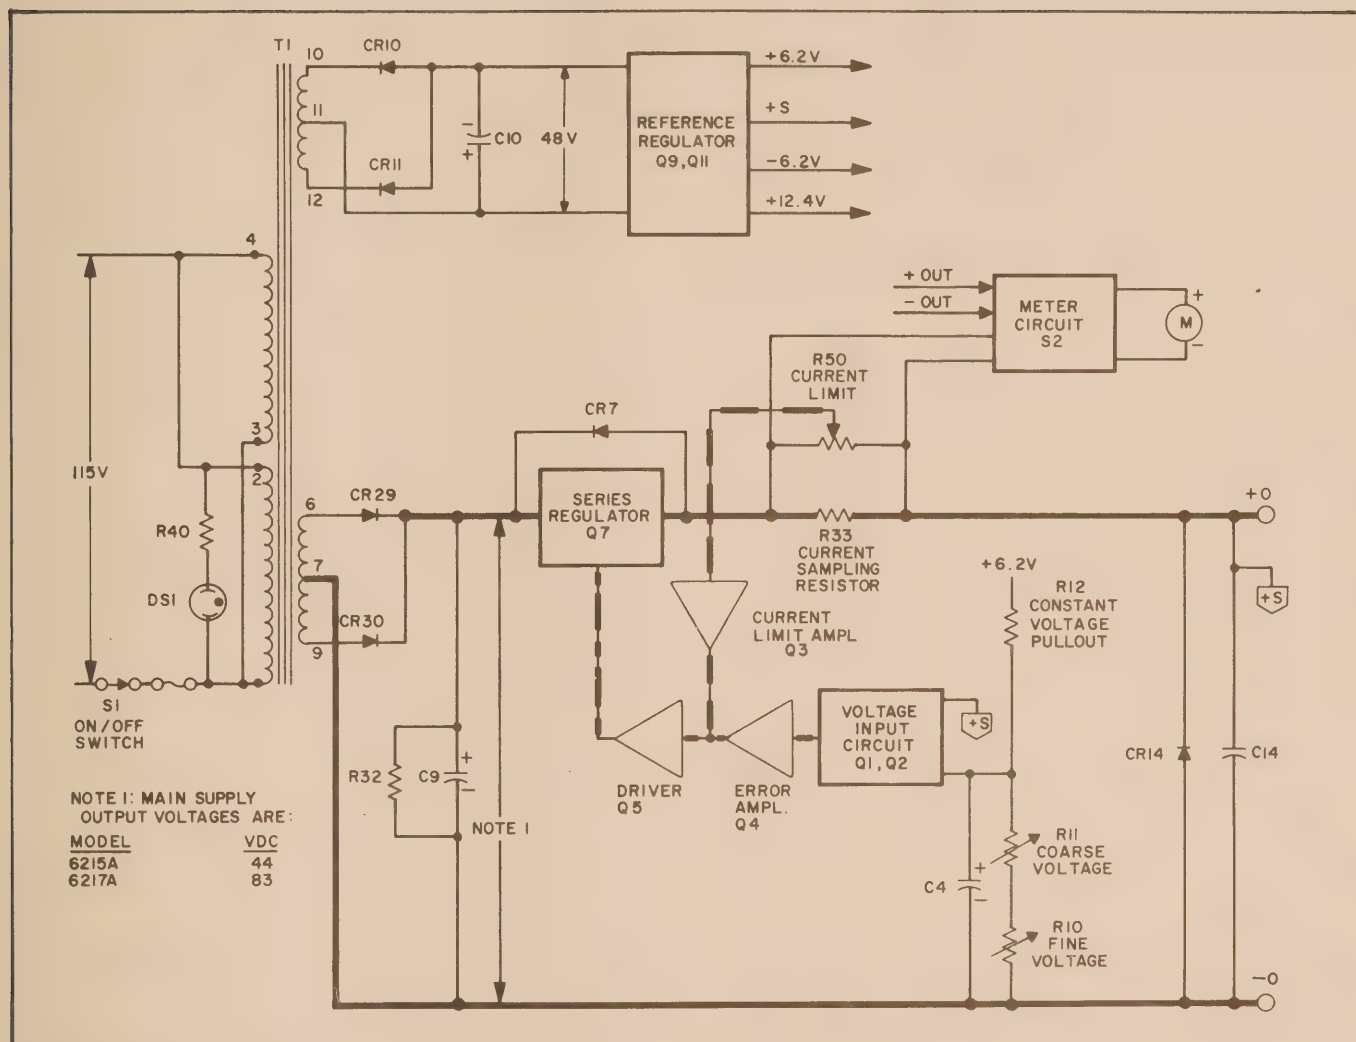


Figure 4-1. Simplified Schematic

4-1 SIMPLIFIED DISCUSSION

4-2 The power supply, as shown on the simplified schematic diagram of Figure 4-1, consists of a power transformer, rectifier and filter, series regulator, error amplifier and driver, constant voltage input circuit, current limiting circuit, reference regulator circuit, and a metering circuit.

4-3 The input line voltage passes through the power transformer to the rectifier and filter. The rectifier-filter converts the ac input to raw dc which is fed to the positive terminal via the regulator and current sampling resistor network. The

regulator, part of the feedback loop, is made to alter its conduction to maintain a constant output voltage. The voltage developed across the current sampling resistor is the input to the current limiting circuit. If the output current that passes through the sampling resistor exceeds a certain predetermined level, the current limiting circuit applies a feedback signal to the series regulator which alters the regulator's conduction so that the output current does not exceed the current limit. The constant voltage input circuit obtains its input by sampling the output voltage of the supply. Any changes in output voltage are detected in the constant voltage input circuit, amplified by the error

amplifier and driver, and applied to the series regulator in the correct phase and amplitude to counteract the change in output voltage. The reference regulator circuit provides stable reference voltages which are used by the constant voltage input circuit for comparison purposes. The meter circuit provides indications of output voltage or current in either operating mode.

4-4 Diode CR14, connected across the output terminals of the power supply, is a protective device which prevents internal damage that might occur if a reverse voltage were applied across the output terminals.

4-5 DETAILED CIRCUIT ANALYSIS (Refer to overall schematic diagram at rear of manual)

4-6 . FEEDBACK LOOP

4-7 The feedback loop functions continuously to keep the output voltage constant, during constant voltage operation, and the output current at a safe limit during current limit operation. For purposes of this discussion, assume that the unit is in constant voltage operation and that the programming resistors R10 and R11 have been adjusted so that the supply is yielding the desired output voltage. Further assume that the output voltage instantaneously rises (goes positive) due to a variation in the external load circuit.

4-8 Note that the change may be in the form of a slow rise in the output voltage or a positive going AC signal. An AC signal is coupled to the voltage input circuit through capacitor C1 and a DC voltage is coupled through R10 and R11.

4-9 The rise in output voltage causes the voltage at the base of Q1 to decrease (go negative). Q1 now decreases its conduction and its collector voltage rises. The positive going error voltage is amplified and inverted by Q4 and fed to the base of series transistor Q7 via emitter follower Q5. The negative going input causes Q7 to decrease its conduction so that it drops more of the line voltage, and reduces the output voltage to its original level.

4-10 When the external load resistance decreases, the output current increases until the current limit is reached. The positive voltage developed at the wiper of R50 causes Q3 to conduct. CR4 becomes forward biased and controls the conduction of Q5 and Q7. Any further decreases in load resistance increase the negative voltage on the base of Q5 which decreases the conduction of Q7. Thus, through feedback action the output current is limited to the value at which CR4 conducts.

4-11 SERIES REGULATOR

4-12 The series regulator consists of transistor stage Q7 (see schematic at rear of manual). The regulator serves as a series control element by altering its conduction so that the output voltage is kept constant and the current limit is never exceeded. The conduction of Q5 is controlled by the feedback voltage obtained from driver Q4. Diode CR7, connected across the regulator circuit, protects the series transistor against reverse voltages that could develop across it during parallel or auto-parallel operation if one supply is turned on before the other.

4-13 CONSTANT VOLTAGE INPUT CIRCUIT (Refer to overall schematic at rear of manual)

4-14 The circuit consists of the coarse and fine programming resistors (R10 and R11), and a differential amplifier stage (Q1, Q2, and associated components). Drift due to thermal differentials is minimized, since both transistors operate at essentially the same temperature.

4-15 The constant voltage input circuit continuously compares a fixed reference voltage with a portion of the output voltage and, if a difference exists, produces an error voltage whose amplitude and phase is proportional to the difference. The error output is fed back to the series regulator, through the error and driver amplifiers. The error voltage changes the conduction of the series regulator which, in turn, alters the output voltage so that the difference between the two input voltages applied to the differential amplifier is reduced to zero. The above action maintains the output voltage constant.

4-16 Stage Q2 of the differential amplifier is connected to a common (+S) potential through impedance equalizing resistor R6. Resistors R5 and R7 are used to zero bias the input stage, offsetting minor base-to-emitter voltage differences in Q1 and Q2. The base of Q1 is connected to a summing point at the junction of the programming resistors and the current pullout resistor, R12. Instantaneous changes in output voltage result in an increase or decrease in the summing point potential. Q1 is then made to conduct more or less, in accordance with the summing point voltage change. The resultant output error voltage is fed back to the series regulator via the remaining components of the feedback loop. Resistor R1, in series with the base Q1, limits the current through the programming resistors during rapid voltage turn-down. Diodes CR1 and CR2 form a limiting network which prevent excessive voltage excursions from over driving stage Q1. Capacitor C1,

shunting the programming resistors, increases the high frequency gain of the input amplifier.

4-17 DRIVER AND ERROR AMPLIFIER (Refer to overall schematic at rear of manual)

4-18 The error and driver amplifiers amplify the error signal from the constant voltage input circuit to a level sufficient to drive the series regulator transistor. Driver Q5 also receives a current limiting input if CR4, the current limiting diode, becomes forward biased.

4-19 Stage Q4 contains a feedback equalizer network, C3 and R17, which provides for high frequency roll off in the loop gain in order to stabilize the feedback loop.

4-20 CURRENT LIMITING CIRCUIT

4-21 Current limiting occurs when transistor Q3 conducts. This is determined by the voltage drop across current sampling resistor R33 and the adjustment of current limit potentiometer R50. When the output current reaches the limit value, the positive voltage (with respect to +S) on the wiper arm of R50 causes Q3 to conduct. Diode CR4 becomes forward biased clamping the base of Q5 to a potential which decreases the conduction of the series regulator, thus limiting the output current. Potentiometer R50 permits the base potential of Q3 to be varied and thus changes the current limiting threshold.

4-22 REFERENCE CIRCUIT (Refer to schematic at rear of manual)

4-23 The reference circuit is a separate power

supply similar to the main supply. It provides stable reference voltages which are used throughout the unit. The reference voltages are all derived from smoothed dc obtained from the full wave rectifier (CR10 and CR11) and filter capacitor C5. The -6.2V reference voltage is derived from VR1 which is a second dc source regulating at 6.2vdc. Current for VR1 is supplied by the (-) side of C5 and flows through VR1, the base-emitter junction of Q7, R20, and back to the positive side of C5.

4-24 The base-emitter junction of Q11 is held constant by 6.2V zener diode VR7 which regulates line voltage changes that alter the voltage across C5. Thus Q11 is a constant current source feeding 12.4V zener diode VR4 and 6.2V temperature-compensated zener diode VR6.

4-25 Resistors R27 and R30 form a voltage divider across the stable 6.2 volts developed by VR1. The base-emitter junction of Q9 is therefore held constant by the voltage developed across R27. Thus Q9 provides a constant current to zener diode VR3, which regulates the -6.2V source.

4-26 METER CIRCUIT

4-27 This circuit provides indications of output voltage or output current. With METER SELECTION switch S2 set to VOLTS position, the meter in series with R47 and R38 is connected directly across the output of the supply. Potentiometer R47 adjusts the electrical meter zero in the voltage range. With S2 set to the MA position the meter is connected across the current sampling resistor R33.

SECTION V MAINTENANCE

5-1 INTRODUCTION

5-2 Upon receipt of the power supply, the performance check (Paragraph 5-13) should be made. This check is suitable for incoming inspection. If a fault is detected in the power supply while making the performance check or during normal operation, proceed to the troubleshooting procedures (Paragraph 5-46). After troubleshooting and repair (Paragraph 5-53), perform any necessary adjustments and calibrations (Paragraph 5-55). Before returning the power supply to normal operation, repeat the performance check to ensure that the fault has been properly corrected and that no other faults exist. Before doing any maintenance checks, turn-on power supply, allow a half-hour warm-up, and read the general information regarding measurement techniques (Paragraph 5-6).

5-3 COVER REMOVAL AND REPLACEMENT

5-4 To remove the top and bottom covers, proceed as follows:

- Insert a small screwdriver in each of the four notches at the front of the unit at the top and bottom. Push the screwdriver under the front panel and gently pry toward the front of the unit to release the holding mechanism.
- Pull the front panel forward until it clears the top and bottom covers.
- Remove the rear cover by repeating step a.
- Pull the rear cover until it clears the top and bottom covers. Then lift off the top cover and lift the unit out of the bottom cover.

5-5 To replace the top and bottom covers, proceed as follows:

- Place the unit into the bottom cover (identified by the four protruding feet) and align the heat sink into the track in the bottom cover.
- Place the top cover over the unit and align the track over the heat sink.
- While holding the covers together at the rear of the unit, carefully push on the rear panel.
- Position the front panel so that the two slotted ears at the bottom of the panel align with the printed wiring boards.
- Carefully push on the front panel.

5-6 GENERAL MEASUREMENT TECHNIQUES

5-7 The measuring device must be connected as close to the output terminals as possible when

measuring the output impedance, transient response, regulation, or ripple of the power supply in order to achieve valid measurements. A measurement made across the load includes the impedance of the leads to the load and such lead lengths can easily have an impedance several orders of magnitude greater than the supply impedance, thus invalidating the measurement.

5-8 The monitoring device should be connected as shown in Figure 5-1. Note that when measurements are made at the front terminals, the monitoring leads are connected at A, not B, as shown in Figure 5-1. Failure to connect the measuring device at A will result in a measurement that includes the resistance of the leads between the output terminals and the point of connection.

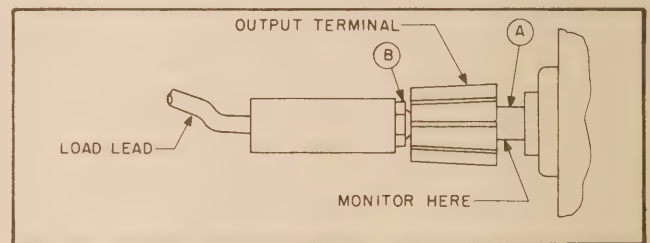


Figure 5-1. Front Panel Terminal Connections

5-9 For output current measurements, the current sampling resistor should be a four-terminal resistor. The four terminals are connected as shown in Figure 5-2. In addition, the resistor should be of the low noise, low temperature coefficient (less than 30 ppm/°C) type and should be used at no more than 5% of its rated power so that its temperature rise will be minimized.

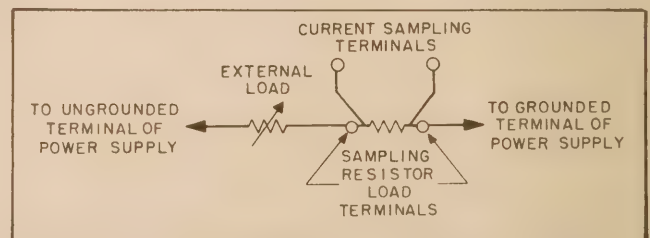


Figure 5-2. Output Current Measurement Technique

5-10 When using an oscilloscope, ground one terminal of the power supply and then ground the case

of the oscilloscope to this same point. Make certain that the case is not also grounded by some other means (power line). Connect both oscilloscope input leads to the power supply ground terminal and check that the oscilloscope is not exhibiting a ripple or transient due to ground loops, pick-up, or other means.

5-11 TEST EQUIPMENT REQUIRED

5-12 Table 5-1 lists the test equipment required to perform the various procedures described in this Section.

Table 5-1. Test Equipment Required

Type	Required Characteristics	Use	Recommended Model
Differential Voltmeter	Sensitivity: 1mV full scale (min.). Input impedance: 10 megohms (min.).	Measure DC voltages; calibration procedures	hp 3420 (See Note)
Variable Voltage	Range: 90-130 volts. Equipped with voltmeter accurate within 1 volt.	Vary AC input	-----
AC Voltmeter	Accuracy: 2%. Sensitivity: 1mV full scale deflection (min.).	Measure AC voltages and ripple	hp 403B
Oscilloscope	Sensitivity: 100 μ V/cm. Differ- ential input.	Display transient response waveforms	hp 140A plus 1400A plug-in. 1402A plug-in for spike measurements only.
Oscillator	Range: 5Hz to 600KHz. Accuracy: 2%. Output: 10Vrms.	Impedance checks	hp 200CD
DC Voltmeter	Accuracy: 1%. Input resistance: 20,000 ohms/volt (min.).	Measure DC voltages	hp 412A
Repetitive Load Switch	Rate: 60-400Hz, 2 μ sec rise and fall time.	Measure transient response	See Figure 5-9.
Resistive Loads	Values: See Paragraph 5-16.	Power supply load resistors	-----
Current Sam- pling Resistor	See R33 in Parts List (Section VI).	Measure current; calibrate meter	-----
Resistor	1K Ω \pm 1%, 2 watt non-inductive.	Measure impedance	-----
Resistor	100 ohms, \pm 5%, 10 watt.	Measure impedance	-----
Capacitor	500 μ f, 50WVdc.	Measure impedance	-----

NOTE

A satisfactory substitute for a differential voltmeter is to arrange a reference voltage source and null detector as shown in Figure 5-3. The reference voltage source is adjusted so that the voltage difference between the supply being measured and the reference voltage will have the required resolution for the measurement being made. The voltage difference will be a function of the null detector that is used. Examples of satisfactory null detectors are: ϕ 419 A null detector, a DC coupled oscilloscope utilizing differential input, or a 50 mv meter movement with a 100 division scale. For the latter, a 2 mv change in voltage will result in a meter deflection of four divisions.

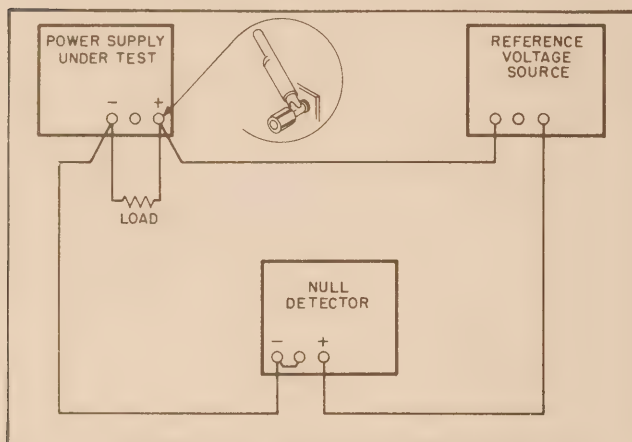


Figure 5-3. Differential Voltmeter Substitute Test Setup

CAUTION

Care must be exercised when using an electronic null detector in which one input terminal is grounded to avoid ground loops and circulating currents.

5-13 PERFORMANCE TEST

5-14 The following test can be used as an incoming inspection check and appropriate portions of the test can be repeated either to check the operation of the instrument after repairs or for periodic maintenance tests. The tests are performed using a 115-VAC 60 Hz, single phase input power source. If the correct result is not obtained for a particular check, do not adjust any controls; proceed to troubleshooting (Paragraph 5-48).

5-15 RATED OUTPUT AND METER ACCURACY

5-16 Voltage. To check the output voltage, proceed as follows:

- Connect 65Ω , $\pm 5\%$, 10 watt load resistor (250 ohms for Model 6217A) across rear output terminals of supply.
- Connect differential voltmeter across (+) and (-) terminals of supply observing correct polarity.
- Set METER SELECTION switch to VOLTS and turn on supply.
- Adjust VOLTAGE controls until front panel meter indicates exactly the maximum rated output voltage.
- Differential voltmeter should indicate maximum rated output voltage within $\pm 2\%$.

5-17 Current. To check the output current, proceed as follows:

- Connect test setup shown in Figure 5-4.

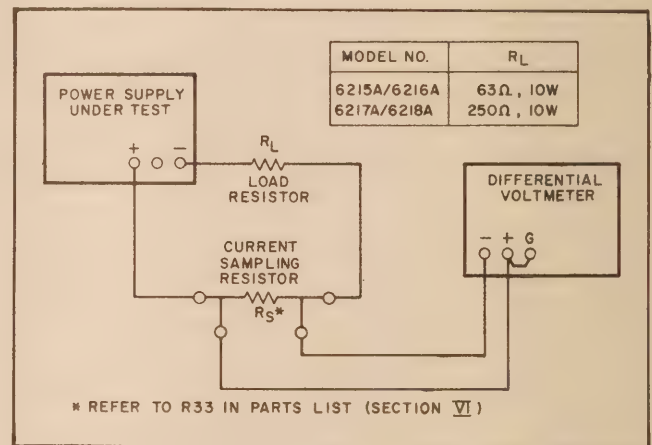


Figure 5-4. Output Current, Test Setup

- Set METER SELECTION switch to MA position.
- Turn on supply and adjust VOLTAGE controls until front panel meter indicates maximum rated output current.
- Differential voltmeter should read as follows:

Model No.	6215A	6217A
Reading (Vdc)	1.2 ± 0.024	1.2 ± 0.024

5-18 LOAD REGULATION

Definition: The change ΔE_{OUT} in the static value of DC output voltage resulting from a change in load resistance from open circuit to a value which yields maximum rated output current (or vice versa).

5-19 To check the constant voltage load regulation, proceed as follows:

- Connect test setup as shown in Figure 5-5.

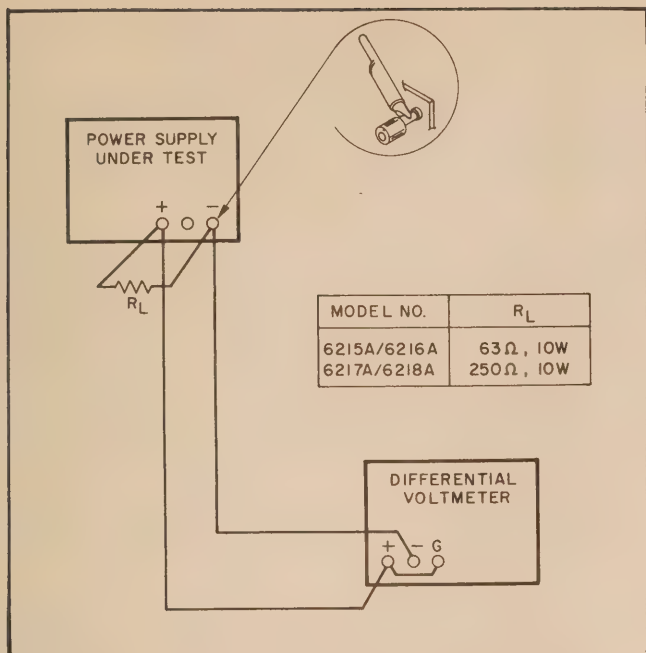


Figure 5-5. Load Regulation, Test Setup

- b. Set METER SELECTION switch to MA position.
- c. Turn on supply and adjust VOLTAGE controls until front panel meter indicates maximum rated output current.
- d. Read and record voltage indicated on differential voltmeter.
- e. Disconnect load resistor.
- f. Reading on differential voltmeter should not vary from reading recorded in step d by more than 3.5 mvdc for Model 6215A or 6 mvdc for Model 6217A supply.

5-20 LINE REGULATION

Definition: The change, ΔE_{OUT} , in the static value of DC output voltage resulting from a change in AC input voltage over the specified range from low line (usually 105 volts) to high line (usually 125 volts), or from high line to low line.

5-21 To test the line regulation, proceed as follows:

- a. Connect variable auto transformer between input power source and power supply power input.
- b. Connect test setup shown in Figure 5-5.
- c. Adjust variable auto transformer for 105 VAC input.
- d. Set METER SELECTION switch to VOLTS position.
- e. Turn on supply and adjust VOLTAGE controls until front panel meter indicates exactly the maximum rated output voltage.

f. Read and record voltage indicated on differential voltmeter.

g. Adjust variable auto transformer for 125 VAC input.

h. Reading on differential voltmeter should not vary from reading recorded in step f by more than 6.5 mvdc for Model 6215A or 9 mvdc for Model 6217A supply.

5-22 Ripple and Noise.

Definition: The residual AC voltage which is superimposed on the DC output of a regulated power supply.

Ripple and noise may be specified and measured in terms of its RMS or (preferably) peak-to-peak value.

Ripple and noise measurement can be made at any input AC line voltage combined with any DC output voltage and load current within rating.

5-23 The amount of ripple and noise that is present on the power supply output is measured either in terms of the RMS or (preferably) peak-to-peak value. The peak-to-peak measurement is particularly important for applications where noise spikes could be detrimental to a sensitive load, such as logic circuitry. The RMS measurement is not an ideal representation of the noise, since fairly high output noise spikes of short duration could be present in the ripple and not appreciably increase the RMS value.

5-24 The technique used to measure high frequency noise or "spikes" on the output of a power supply is more critical than the low frequency ripple and noise measurement technique; therefore the former is discussed separately in Paragraph 5-32.

5-25 Ripple and Noise Measurements. Figure 5-6A shows an incorrect method of measuring p-p ripple. Note that a continuous ground loop exists from the third wire of the input power cord of the supply to the third wire of the input power cord of the oscilloscope via the grounded power supply case, the wire between the negative output terminal of the power supply and the vertical input of the scope, and the grounded scope case. Any ground current circulating in this loop as a result of the difference in potential E_G between the two ground points causes an IR drop which is in series with the scope input. This IR drop, normally having a 60 Hz line frequency fundamental, plus any pickup on the unshielded leads interconnecting the power supply and scope, appears on the face of the CRT. The magnitude of this resulting noise signal can easily be much greater than the true ripple developed between the plus and minus output terminals of the power supply, and can completely invalidate the measurement.

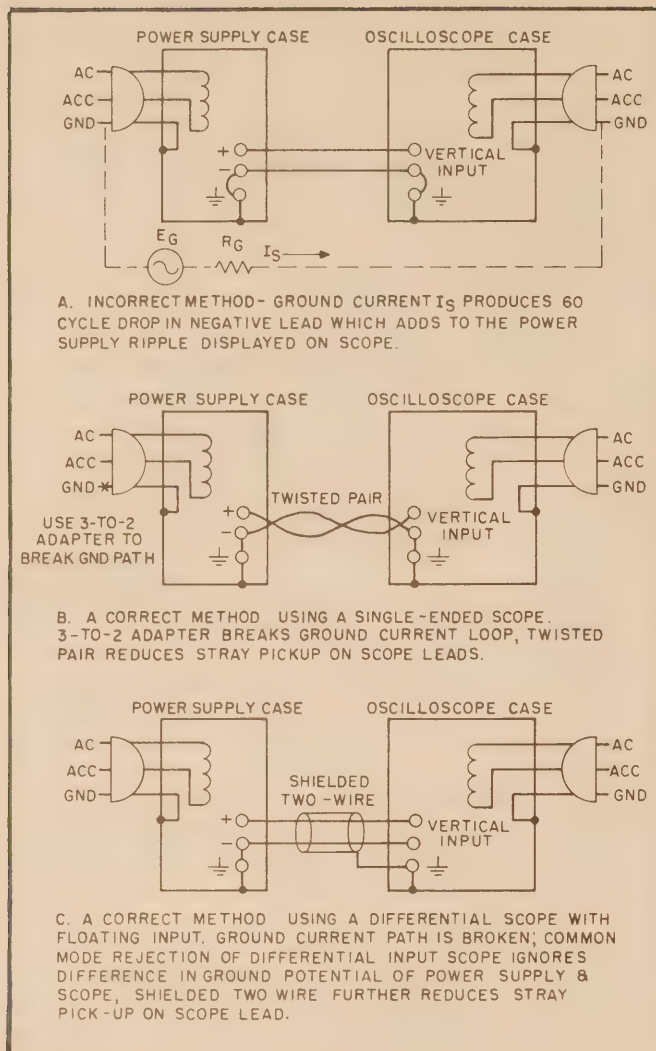


Figure 5-6. Ripple and Noise, Test Setup

5-26 The same ground current and pickup problems can exist if an RMS voltmeter is substituted in place of the oscilloscope in Figure 5-6. However, the oscilloscope display, unlike the true RMS meter reading, tells the observer immediately whether the fundamental period of the signal displayed is 8.3 milliseconds (1/120 Hz) or 16.7 milliseconds (1/60 Hz). Since the fundamental ripple frequency present on the output of an ϕ supply is 120 Hz (due to full-wave rectification), an oscilloscope display showing a 120 Hz fundamental component is indicative of a "clean" measurement setup, while the presence of a 60 Hz fundamental usually means that an improved setup will result in a more accurate (and lower) value of measured ripple.

5-27 Figure 5-6B shows a correct method of measuring the output ripple of a constant voltage power supply using a single-ended scope. The ground loop path is broken with a 3 to 2 adapter in series

with the power supply's AC line plug. Notice, however, that the power supply case is still connected to ground via the power supply output terminals, the leads connecting these terminals to the scope terminals, the scope case and the third wire of the power supply cord.

5-28 Either a twisted pair or (preferably) a shielded two-wire cable should be used to connect the output terminals of the power supply to the vertical input terminals of the scope. When using a twisted pair, care must be taken that one of the two wires is connected both to the grounded terminal of the power supply and the grounded input terminal of the oscilloscope. When using shielded two-wire, it is essential for the shield to be connected to ground at one end only so that no ground current will flow through this shield, thus inducing a noise signal in the shielded leads.

5-29 To verify that the oscilloscope is not displaying ripple that is induced in the leads or picked up from the grounds, the (+) scope lead should be shorted to the (-) scope lead at the power supply terminals. The ripple value obtained when the leads are shorted should be subtracted from the actual ripple measurement.

5-30 In most cases, the single-ended scope method of Figure 5-6B will be adequate to eliminate non-real components of ripple and noise so that a satisfactory measurement may be obtained. However, in more stubborn cases, or in measurement situations where it is essential that both the power supply case and the oscilloscope case be connected to ground (e.g. if both are rack-mounted), it may be necessary to use a differential scope with floating input as shown in Figure 5-6C. If desired, two single conductor shielded cables may be substituted in place of the shielded two-wire cable with equal success. Because of its common mode rejection, a differential oscilloscope displays only the difference in signal between its two vertical input terminals, thus ignoring the effects of any common mode signal introduced because of the difference in the AC potential between the power supply case and scope case. Before using a differential input scope in this manner, however, it is imperative that the common mode rejection capability of the scope be verified by shorting together its two input leads at the power supply and observing the trace on the CRT. If this trace is a straight line, the scope is properly ignoring any common mode signal present. If this trace is not a straight line, then the scope is not rejecting the ground signal and must be realigned in accordance with the manufacturer's instructions until proper common mode rejection is attained.

5-31 To check the ripple and noise output, pro-

ceed as follows:

- a. Connect the oscilloscope or RMS voltmeter as shown in Figures 5-6B or 5-6C.
- b. Adjust VOLTAGE control until front panel meter indicates maximum rated output voltage.
- c. The observed ripple and noise should be less than $200\mu\text{V}_{\text{rms}}$ and 1mV p-p .

5-32 Noise Spike Measurement. When a high frequency spike measurement is being made, an instrument of sufficient bandwidth must be used; an oscilloscope with a bandwidth of 20 MHz or more is adequate. Measuring noise with an instrument that has insufficient bandwidth may conceal high frequency spikes detrimental to the load.

5-33 The test setups illustrated in Figures 5-6A and 5-6B are generally not acceptable for measuring spikes; a differential oscilloscope is necessary. Furthermore, the measurement concept of Figure 5-6C must be modified if accurate spike measurement is to be achieved:

1. As shown in Figure 5-7, two coax cables, must be substituted for the shielded two-wire cable.

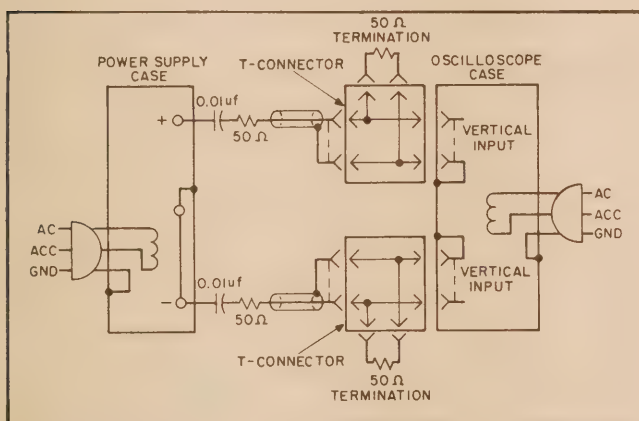


Figure 5-7. Noise Spike Test Setup

2. Impedance matching resistors must be included to eliminate standing waves and cable ringing, and the capacitors must be connected to block the DC current path.
3. The length of the test leads outside the coax is critical and must be kept as short as possible; the blocking capacitor and the impedance matching resistor should be connected directly from the inner conductor of the cable to the power supply terminals.
4. Notice that the shields of the power supply end of the two coax cables are not connected to the power supply ground, since such a connection would give rise to a ground current path through the coax shield, resulting in an erroneous measurement.

5. The measured noise spike values must be doubled, since the impedance matching resistors constitute a 2-to-1 attenuator.

6. The noise spikes observed on the oscilloscope should be less than 0.5mV p-p .

5-34 The circuit of Figure 5-7 can also be used for the normal measurement of low frequency ripple and noise; simply remove the four terminating resistors and the blocking capacitors and substitute a higher gain vertical plug-in in place of the wide-band plug-in required for spike measurements. Notice that with these changes, Figure 5-7 becomes a two-cable version of Figure 5-6C.

5-35 OUTPUT IMPEDANCE

Definition: At any given frequency of load change, $\Delta E_{\text{OUT}}/\Delta I_{\text{OUT}}$. Strictly speaking the definition applies only for a sinusoidal load disturbance, unless, of course, the measurement is made at zero frequency (DC). The output impedance of an ideal constant voltage power supply would be zero at all frequencies, while the output impedance for an ideal constant current power supply would be infinite at all frequencies.

The output impedance of a power supply is normally not measured, since the measurement of transient recovery time reveals both the static and dynamic output characteristics with just one measurement. The output impedance of a power supply is commonly measured only in those cases where the exact value at a particular frequency is of engineering importance.

5-36 To check the output impedance, proceed as follows:

- a. Connect test setup shown in Figure 5-8.

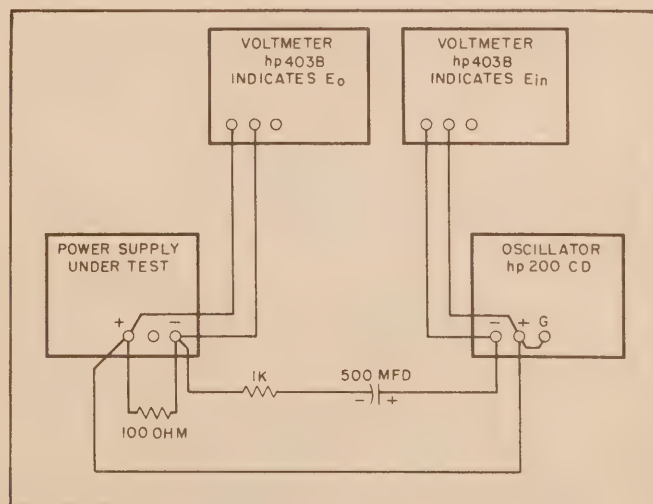


Figure 5-8. Output Impedance, Test Setup

- b. Set METER SELECTION switch to VOLTS position.
- c. Turn on supply and adjust VOLTAGE controls until front panel meter reads 20 volts.
- d. Set AMPLITUDE control on Oscillator to 10 volts (E_{in}), and FREQUENCY control to 100 Hz.
- e. Record voltage across output terminals of the power supply (E_o) as indicated on AC voltmeter.
- f. Calculate the output impedance by the following formula:

$$Z_{out} = \frac{E_o R}{E_{in} - E_o}$$

E_o = rms voltage across power supply output terminals.

$R = 1000$

$E_{in} = 10$ volts

- g. The output impedance (Z_{out}) should be less than 0.020 ohms.
- h. Using formula of step f, calculate output impedance at frequencies of 50 kHz and 500 kHz. Values should be less than 0.5 ohm and 3.0 ohms, respectively.

5-37 Output Inductance. To check the output inductance, repeat steps a through f at frequencies of 10 kHz, 50 kHz and 100 kHz. Calculate the output inductance (L) using the following formula:

$$L = \frac{X_L}{2 \pi f} \text{ (See Note)}$$

The oscillator frequency is equivalent to f in the equation. The output inductance should be less than 20 microhenries.

NOTE

The equation assumes that X_L is much greater than R_{out} and therefore $X_L = Z_{out}$.

5-38 CURRENT LIMIT

5-39 To check the current limiting characteristics of the supply, proceed as follows:

- a. Attach the multimeter or a milliammeter to the output terminals of the supply. Set the meter for approximately 600 mA. The internal resistance of the meter is low enough to overload the supply so that the output will current limit.

- b. Adjust the VOLTAGE controls fully clockwise.

- c. The meter should read as follows:

Model 6215A 475 \pm 10 mA

6217A 250 \pm 10 mA

5-40 TRANSIENT RECOVERY TIME

Definition: The time "X" for output voltage recovery to within "Y" millivolts of the nominal output voltage following a "Z" amp step change in load current — where:

"Y" is specified separately for each model but is generally of the same order as the load regulation specification. The nominal output voltage is defined as the DC level half way between the static output voltage before and after the imposed load change, and "Z" is the specified load current change, normally equal to the full load current rating of the supply.

5-41 Transient recovery time may be measured at any input line voltage combined with any output voltage and load current within rating.

5-42 Reasonable care must be taken in switching the load resistance on and off. A hand-operated switch in series with the load is not adequate, since the resulting one-shot displays are difficult to observe on most oscilloscopes, and the arc energy occurring during switching action completely masks the display with a noise burst. Transistor load switching devices are expensive if reasonably rapid load current changes are to be achieved.

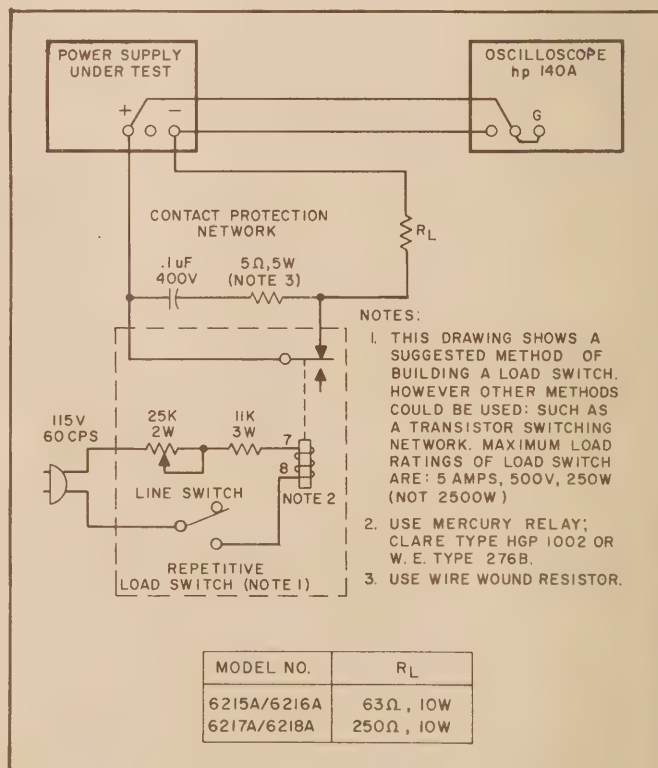


Figure 5-9. Transient Recovery Time, Test Setup

5-43 A mercury-wetted relay, as connected in the load switching circuit of Figure 5-9 should be used for loading and unloading the supply. When this load switch is connected to a 60 Hz AC input,

the mercury-wetted relay will open and close 60 times per second. Adjustment of the 25K control permits adjustment of the duty cycle of the load current switching and reduction in jitter of the oscilloscope display.

5-44 The maximum load ratings listed in Figure 5-9 must be observed in order to preserve the mercury-wetted relay contacts. Switching of larger load currents can be accomplished with mercury pool relays; with this technique fast rise times can still be obtained, but the large inertia of mercury pool relays limits the maximum repetition rate of load switching and makes the clear display of the transient recovery characteristic on an oscilloscope more difficult.

5-45 To check the transient recovery time, proceed as follows:

- a. Connect test setup shown in Figure 5-9.
- b. Set METER SELECTION switch to mA.
- c. Turn on supply and adjust voltage controls until front panel meter indicates exactly the maximum rated output current.
- d. Close the line switch on the repetitive load switch setup.
- e. Set the oscilloscope for internal sync and lock on either the positive or negative load transient spike.
- f. Set the vertical input of the oscilloscope for ac coupling so that small dc level changes in the output voltage of the power supply will not cause the display to shift.
- g. Adjust the vertical centering on the scope so that the tail ends of the no load and full load waveforms are symmetrically displaced about the horizontal center line of the oscilloscope. This center line now represents the nominal output voltage defined in the specification.
- h. Adjust the horizontal positioning control so that the trace starts at a point coincident with a major graticule division. This point is then representative of time zero.
- i. Increase the sweep rate so that a single transient spike can be examined in detail.

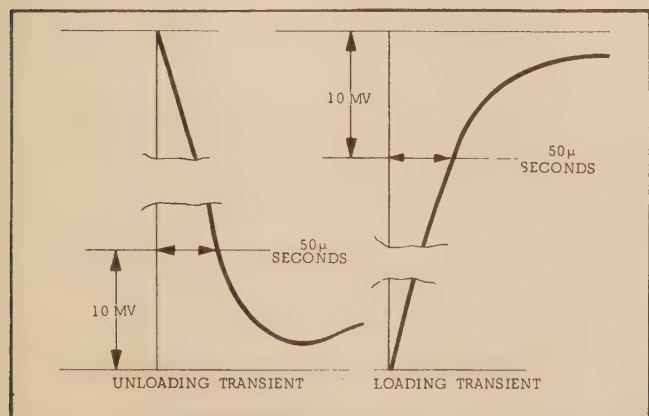


Figure 5-10. Transient Recovery Time, Waveforms

j. Adjust the sync controls separately for the positive and negative going transients so that not only the recovery waveshape but also as much as possible of the rise time of the transient is displayed.

k. Starting from the major graticule division representative of time zero, count to the right 50 μ sec and vertically 10 mV. Recovery should be within these tolerances as illustrated in Figure 5-10

5-46 TROUBLESHOOTING

5-47 Components within Hewlett-Packard power supplies are conservatively operated to provide maximum reliability. In spite of this, parts within a supply may fail. Usually the instrument must be immediately repaired with a minimum of "down time" and a systematic approach as outlined in succeeding paragraphs can greatly simplify and speed up the repair.

5-48 TROUBLE ANALYSIS

5-49 General. Before attempting to troubleshoot this instrument, ensure that the fault is with the instrument and not with an associated circuit. The performance test (Paragraph 5-13) enables this to be determined without having to remove the instrument from the cabinet.

5-50 Once it is determined that the power supply is at fault, check for obvious troubles such as open fuse, a defective power cable, or an input power failure. Next, remove the top and bottom covers as described in paragraph 5-3 and inspect for open connections, charred components, etc. If the trouble source cannot be detected by visual inspection, follow the detailed procedure outlined in succeeding paragraphs. Once the defective component has been located (by means of visual inspection or trouble analysis) correct it and re-conduct the performance test. If a component is replaced, refer to the repair and replacement and adjustment and calibration paragraphs in this section.

5-51 A good understanding of the principles of operation is a helpful aid in troubleshooting, and it is recommended that the reader review Section IV of the manual before attempting to troubleshoot the unit in detail. Once the principles of operation are understood, logical application of this knowledge used in conjunction with the normal voltage readings shown on the schematic and the additional procedures given in the following paragraphs should suffice to isolate a fault to a component or small group of components. The normal voltages shown on the schematic are positioned adjacent to the applicable test points (identified by encircled numbers on the schematic and printed wiring boards).

5-52 Table 5-2 includes the symptoms and probable causes of many possible troubles. If either high or low output voltage is a symptom, there are two methods of isolating the fault. The first is a simplified procedure that involves only measuring voltages; the second is a more thorough approach requiring that transistor stages be opened or shorted. Both methods are described as follows:

1. First, the reference, bias, and filtered dc voltages as given in Table 5-3 should be checked. Then the voltage levels at critical points

(base and collector) in the feedback loop should be measured and compared to the normal voltages given on the overall schematic diagram at the rear of the manual. This method of troubleshooting a feedback loop is not always conclusive; a better method is described in (2).

2. First, measure the reference, bias, and filtered dc voltages as given in Table 5-3. Then, drive each stage in the feedback loop into conduction or cutoff by either shorting or opening the previous stage as indicated in Tables 5-4 or 5-5.

Table 5-2. Common Troubles

Symptom	Probable Cause
Low output or no output voltage	Refer to Table 5-3, then 5-4.
High output voltage	Refer to Table 5-3, then 5-5.
High ripple	<ul style="list-style-type: none"> a. Check operating setup for ground - refer to Paragraph 5-22. b. If output floating, connect 1 μf capacitor between output and ground. c. Check for excessive internal ripple; refer to Table 5-3. d. Ensure that supply is not in current limit operation under loaded conditions. To prevent this condition, increase load resistance so that output current does not exceed maximum rated output. e. Check for low voltage across C5 or C9.
Poor line regulation	<ul style="list-style-type: none"> a. Improper measuring technique; refer to Paragraph 5-3. b. Check reference circuit voltages, Table 5-3. c. Check reference circuit adjustment, Paragraph 5-63.
Poor load regulation (Constant Voltage)	<ul style="list-style-type: none"> a. Improper measuring technique; refer to Paragraph 5-3. b. Check reference circuit voltages (Table 5-3) and reference circuit adjustment (Paragraph 5-63). c. Ensure that supply is not in current limit operation under loaded conditions. To prevent this condition, ensure that output current does not exceed maximum rated output.
Oscillates	<ul style="list-style-type: none"> a. Check C3 and R17.

Table 5-2. Common Troubles (Continued)

Symptom	Probable Cause
Poor stability (Constant Voltage)	a. Check +6.2Vdc reference voltage (Table 5-3). b. Noisy programming resistor R10 or R11. c. CR1, CR2 leaky. d. Check R1, R12, and C1 for noise or drift. e. Stage Q1/Q2 defective.
Poor transient recovery	a. Check R17 and C3.

Table 5-3. Reference, Bias, and Filtered DC Troubleshooting

Meter Common	Meter Positive	Normal Vdc	Normal Ripple (P-P)	Probable Cause
C5 (-)	C5 (+)	48 ±		T1, C10, CR10, CR11, C5
+S	7	12.4 ± 1V	0.4mV	VR4, Q11, VR7
+S	8	6.2 ± .3V	0.1mV	VR6
9	+S	6.2 ± .3V	0.2mV	VR3, Q9, R27, R30
11	+S	12.4 ±	0.1mV	VR1
-OUT	6	44V (6215A) 83V (6217A)	600mV 700mV	

Table 5-4. Low Output Voltage Troubleshooting

Step	Action	Response	Probable Cause
1	Turn the VOLTAGE control fully clockwise and disconnect the load		
2	To eliminate the current limit circuit as a cause of the malfunction, remove CR4 cathode or anode lead	a. Output increases b. Output remains low	a. CR4 or R50 defective b. Reconnect CR4 and proceed to Step 3
3	Check conduction of Q7 by connecting a jumper between Q5 emitter and base	a. Output remains low b. Output increases	a. Q7, CR7 or associated parts defective b. Remove jumper and proceed to Step 4
4	Check turnoff of Q5 by shorting Q4 emitter to collector	a. Output remains low b. Output increases	a. Q5, R19, R20 defective b. Remove jumper and proceed to Step 5
5	Check conduction of Q4 by shorting Q1 emitter to collector	a. Output remains low b. Output increases	a. Stage Q4 defective b. Stage Q1/Q2 defective. Check R10, R11, C1 for short and R12 for open.

Table 5-5. High Output Voltage Troubleshooting

Step	Action	Response	Probable Cause
1	Turn the VOLTAGE control to approximately mid-range and disconnect the load. If the output voltage should rise to an excessive value during the following procedures, the VOLTAGE control could be damaged if it is turned CCW.		
2	Check turnoff of Q7 by shorting Q5 emitter to collector	a. Output remains high b. Output decreases	a. Q7, CR7, R23, R27, R34 defective b. Remove short across Q4 and proceed to Step 3
3	Check conduction of Q4 by shorting Q5 emitter to collector	a. Output remains high b. Output decreases	a. Q4, CR17, R38 defective b. Remove short across Q5 and proceed to Step 4
4	Open Q3 collector lead. Check conduction of Q5 by shorting R33	a. Output remains high b. Output decreases	a. Q5, R31 or associated components defective b. Remove short and proceed to Step 5
5	Check turnoff of Q3 by shorting Q3 base to emitter	a. Output remains high b. Output decreases	a. Stage Q3 or Q17 defective b. Remove short and proceed to Step 6
6	Remove CR32 anode or cathode	a. Output decreases b. Output remains high	a. Voltage clamp circuit is defective b. Reconnect CR32 and proceed to Step 7
7	On rear terminal board, short A6 to (-)	a. Output remains high b. Output decreases	a. Stage Q1 defective b. Remove short across terminals A6 and (-). Check R10 for open and R12, R13.

5-53 REPAIR AND REPLACEMENT

5-54 Before servicing a printed wiring board, refer to Figure 5-11. Section VI of this manual contains a tabular list of the instruments replaceable parts. Before replacing a semiconductor device, refer to

Table 5-6 which lists the special characteristics of selected semiconductors. If the device to be replaced is not listed in Table 5-6, the standard manufacturers part number listed in Section VI is applicable.

Table 5-6. Selected Semiconductor Characteristics

Reference Designator	Characteristics	Ⓢ Stock No.	Suggested Replacement
Q7	Power NPN Silicon $h_{fe} = 35$ min. @ $I_C = 4A$ $V_{CE} = 4V$	1854-0225	2N3055 R. C. A.

Excessive heat or pressure can lift the copper strip from the board. Avoid damage by using a low power soldering iron (50 watts maximum) and following these instructions. Copper that lifts off the board should be cemented in place with a quick drying acetate base cement having good electrical insulating properties.


A break in the copper should be repaired by soldering a short length of tinned copper wire across the break.

Use only high quality rosin core solder when repairing etched circuit boards. NEVER USE PASTE FLUX. After soldering, clean off any excess flux and coat the repaired area with a high quality electrical varnish or lacquer.

When replacing components with multiple mounting pins such as tube sockets, electrolytic capacitors, and potentiometers, it will be necessary to lift each pin slightly, working around the components several times until it is free.


WARNING: If the specific instructions outlined in the steps below regarding etched circuit boards without eyelets are not followed, extensive damage to the etched circuit board will result.

1. Apply heat sparingly to lead of component to be replaced. If lead of component passes through an eyelet in the circuit board, apply heat on component side of board. If lead of component does not pass through an eyelet, apply heat to conductor side of board.

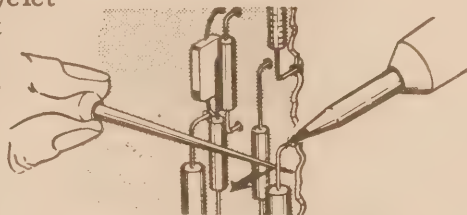

2. Reheat solder in vacant eyelet and quickly insert a small awl to clean inside of hole.

If hole does not have an eyelet, insert awl or a #57 drill from conductor side of board.

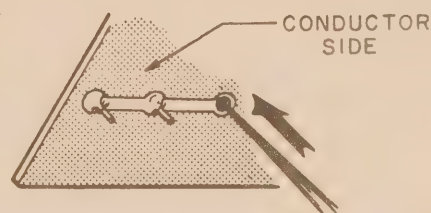


3. Bend clean tinned lead on new part and carefully insert through eyelets or holes in board.




4. Hold part against board (avoid overheating) and solder leads.

Apply heat to component leads on correct side of board as explained in step 1.

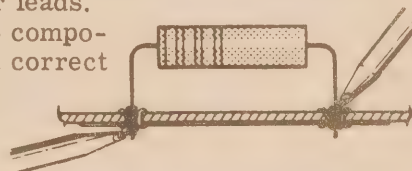


In the event that either the circuit board has been damaged or the conventional method is impractical, use method shown below. This is especially applicable for circuit boards without eyelets.

1. Clip lead as shown below.

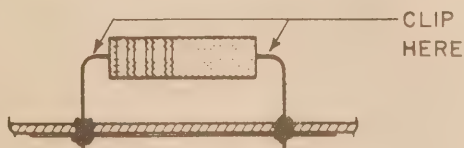

2. Bend protruding leads upward. Bend lead of new component around protruding lead.

Apply solder using a pair of long nose pliers as a heat sink.

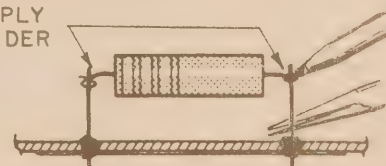

This procedure is used in the field only as an alternate means of repair. It is not used within the factory.

Figure 5-11. Servicing Printed Wiring Boards

Table 5-7. Calibration Adjustment Summary

Adjustment or Calibration	Paragraph	Control Device
Meter Zero	5-57	Pointer
Ammeter Tracking	5-59	R72
"Zero" Volt Output	5-61	R6 or R8
"Voltage" Programming Current	5-46	R13

Adjustment or Calibration	Paragraph	Control Device
Negative Reference Load Adjustment	5-64	Replace VR2
Positive Reference Load Adjustment	5-65	Replace VR1
Current Limit	5-66	R81

5-55 ADJUSTMENT AND CALIBRATION

5-56 Adjustment and calibration may be required after performance testing, troubleshooting, or repair and replacement. Perform only those adjustments that affect the operation of the faulty circuit and no others. Table 5-7 summarizes the adjustments and calibrations contained in the following paragraphs.

5-57 METER MECHANICAL ZERO

5-58 Proceed as follows to zero meter:

- Turn off instrument (after it has reached normal operating temperature) and allow 30 seconds for all capacitors to discharge.
- Insert sharp pointed object (pen point or awl) into the small hole at top of round black plastic disc located directly below meter face.
- Rotate plastic disc clockwise (cw) until meter reads zero, then rotate ccw slightly in order to free adjustment screw from meter suspension. If pointer moves, repeat steps b and c.

5-59 METER CALIBRATION

5-60 To calibrate the ammeter, proceed as follows:

- Connect test setup as shown on Figure 5-4.
- Set METER SELECTION switch to mA position.
- Turn on supply and adjust VOLTAGE controls so that differential voltmeter indicates exactly 1.2 volts.
- Adjust R47 until front panel ammeter indicates:

6215A	400 mA
6217A	200 mA

5-61 ZERO VOLTS OUTPUT ADJUSTMENT

5-62 To calibrate the output voltage so that there is zero volts output when the VOLTAGE controls are fully ccw, proceed as follows:

- Connect differential voltmeter between (+) and (-) output terminals.
- Short out voltage controls by connecting jumper across R10 and R11.
- Turn on supply and observe reading on differential voltmeter.
- If it is more positive than 0 volts, shunt resistor R5 with a decade resistance box.
- Adjust decade resistance until differential voltmeter reads zero, then shunt R5 with resistance value equal to that of the decade resistance.
- If reading of step C was more negative than 0 volts, shunt resistor R7 with the decade resistance value equal to that of the decade box.

5-63 REFERENCE CIRCUIT ADJUSTMENTS

5-64 Load Regulation, -6.2 Volt Reference. To check the load regulation of the -6.2 volt reference voltage, proceed as follows:

- Connect test setup as shown in Figure 5-5.
- Connect differential voltmeter between +S and 9 (across VR3).
- Repeat steps b through e of Paragraph 5-18.
- The differential voltmeter reading should not vary by more than 0.2 mvdc.
- If variation is greater than 0.2 mvdc, replace VR2.

5-65 Load Regulation, ±6.2 Volt Reference. To check the load regulation of the +6.2 volt reference voltage, proceed as follows:

- Connect test setup as shown in Figure 5-5.
- Connect differential voltmeter between 8 and +S (across VR6).
- Repeat steps b through e of Paragraph 5-18.
- The differential voltmeter reading should not vary by more than 0.2 mvdc.
- If it does, replace VR6.

5-66 OUTPUT CURRENT LIMIT ADJUSTMENT

5-67 To adjust the limiting level of the output current, proceed as follows:

- a. Attach the multimeter or a milliammeter to the output terminals of the supply. Set the meter for approximately 600 mA. The internal resistance of the meter is low enough to overload

the supply so that the output will current limit.

- b. Adjust the VOLTAGE controls fully clockwise.

- c. Adjust current limit control R50 for the following indications on the multimeter:

Model	Current Limit
6215A	475 mA
6217A	250 mA

SECTION VI REPLACEABLE PARTS

6-1 INTRODUCTION

6-2 This section contains information for ordering replacement parts.

6-3 Table 6-1 lists parts in the alpha-numerical order of the reference designators and provides the following information:

- a. Description (See list of abbreviations below).
- b. Total quantity used in the instrument.
- c. Manufacturer's name and part number.
- d. The Manufacturer's code number as listed in the Federal Supply Code for Manufacturers H4-1.
- e. The ~~hp~~ Stock Number.
- f. The recommended spare parts quantity for complete maintenance of one instrument during one year of isolated service. (Column RS)

6-4 ORDERING INFORMATION

6-5 To order a replacement part, address order or inquiry to your local Hewlett-Packard field office (see lists at rear of this manual for addresses).

6-6 Specify the following information for each part:

- a. Model and complete serial number of instrument.
- b. Hewlett-Packard stock number.
- c. Circuit reference designator.
- d. Description.

6-7 To order a part not listed in the tables, give a complete description of the part and include its function and location.

REFERENCE DESIGNATORS

A = assembly	Q = transistor
B = motor	R = resistor
C = capacitor	RT = thermistor
CR = diode	S = switch
DS = device signaling (lamp)	T = transformer
E = misc. electronic part	V = vacuum tube,
F = fuse	neon bulb,
J = jack	photocell,
K = relay	etc.
L = inductor	X = socket
M = meter	XF = fuseholder
P = plug	XDS = lampholder
	Z = network

ABBREVIATIONS

a = amperes	obd = order by des-
c = carbon	cription
cer = ceramic	p = peak
coef = coefficient	pc = printed circuit
com = common	board
comp = composition	pf = picofarads =
conn = connection	10 ⁻¹² farads
crt = cathode-ray	pp = peak-to-peak
tube	ppm = parts per million
dep = deposited	pos = position(s)
elect = electrolytic	poly = polystyrene
encap = encapsulated	pot = potentiometer
f = farads	prv = peak reverse
fxd = fixed	voltage
GE = germanium	rect = rectifier
grd = ground(ed)	rot = rotary
h = henries	rms = root-mean-square
Hg = mercury	square
imp = impregnated	s-b = slow-blow
ins = insulation(ed)	sect = section(s)
lin = linear taper	Si = silicon
log = logarithmic	sil = silver
taper	sl = slide
m = milli = 10 ⁻³	td = time delay
M = megohms	TiO ₂ = titanium dioxide
ma = milliamperes	tog = toggle
μ = micro = 10 ⁻⁶	tol = tolerance
mfr = manufacturer	trim = trimmer
mtg = mounting	twt = traveling wave
my = mylar	tube
NC = normally	var = variable
closed	w/ = with
Ne = neon	W = watts
NO = normally open	w/o = without
nsr = not separately	cmo = cabinet mount
replaceable	only
K = kilo = 1000	

MANUFACTURERS

AB	Allen-Bradley	Mot	Motorola, Inc.
B	Bendix Corp.	RCA	Radio Corp. of
Beede	Beede Elec.		America
	Instr. Co., Inc.	Reliance	Reliance Mica
Buss	Bussman Mfg.	Mica	Corp.
Carling	Carling Elec.	Semcor	U.S. Semcor
CTS	CTS Corp.	Sloan	Sloan Co.
Elco	Elco Corp.	Sprague	Sprague Elec.
GE	General Elec.	Superior	Superior Elec.
GI	General Instru.	Sylv.	Sylvania Elec.
HH	Hardwick-		Products, Inc.
	Hindle Co.	TI	Texas Instru.
Kulka	Kulka Electric	WL	Ward Leonard

6-8 CODE LIST OF MANUFACTURERS (Sheet 1 of 3)

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 handbooks.

CODE NO.	MANUFACTURER	ADDRESS	CODE NO.	MANUFACTURER	ADDRESS
00656	Aerovox Corp.	New Bedford, Mass.	06555	Beede Electrical Instrument Co, Inc.	Penacook, N. H.
00853	Sangamo Electric Company,		06751	Nuclear Corp. of America, Inc.,	
01121	Ordill Division (Capacitors)	Marion, Ill.		U. S. Semcor Div.	Phoenix, Arizona
01255	Allen Bradley Co.	Milwaukee, Wis.	06812	Torrington Mfg. Co., West Div.	Van Nuys, Calif.
01281	Litton Industries, Inc.	Beverly Hills, Calif.	• 07137	Transistor Electronics Corp.	Minneapolis, Minn.
	TRW Semiconductors, Inc.	Lawndale, Calif.	07138	Westinghouse Electric Corp.	
01295	Texas Instruments, Inc. Semiconductor-			Electronic Tube Div.	Elmira, N. Y.
	Components Division	Dallas, Texas	07263	Fairchild Semiconductor Div. of	
01561	Chassi-Trak Corp.	Indianapolis, Ind.		Fairchild Camera and Instrument Corp.	Mountain View, Calif.
01686	RCL Electronics, Inc.	Manchester, N. H.	07716	International Resistance Co.	Burlington, Iowa
01930	Amerock Corp.	Rockford, Ill.	07910	Continental Device Corp.	Hawthorne, Calif.
02114	Ferroxcube Corp. of America	Saugerties, N. Y.	07933	Raytheon Mfg. Co., Semiconductor Div.	Mountain View, Calif.
02660	Amphenol-Borg Electronics Corp.	Maywood, Ill.	08530	Reliance Mica Corp.	Brooklyn, N. Y.
02735	Radio Corp. of America, Commercial		08717	Sloan Company	Sun Valley, Calif.
	Receiving Tube and Semiconductor Div.	Somerville, N. J.	11236	CTS of Berne, Inc.	Berne, Ind.
03508	G. E. Semiconductor Products Dept.	Syracuse, N. Y.	11237	Chicago Telephone of California, Inc.	So. Pasadena, Calif.
03877	Transitron Electronic Corp.	Wakefield, Mass.	11711	General Instrument Corp., Semiconductor	
03888	Pyrofilm Resistor Co.	Cedar Knolls, N. J.		Prod. Group, Rectifier Div.	Newark, N. J.
04009	Arrow, Hart and Hegeman Electric Co.	Hartford, Conn.	12697	Clarostat Mfg. Co.	Dover, N. H.
04062	Elmenco Products Co.	New York, N. Y.	14493	Hewlett-Packard Co.,	
04404	Dymec Division of			Loveland Division	Loveland, Colo.
	Hewlett-Packard Co.	Palo Alto, Calif.	14655	Cornell-Dubilier Elec. Corp.	Newark, N. J.
04651	Sylvania Electric Products, Inc.		14936	General Instrument Corp., Semiconductor	
	Microwave Device Div.	Mountain View, Calif.		Prod. Group, Semiconductor Div.	Hicksville, L. I., N. Y.
04713	Motorola, Inc., Semiconductor		15909	Daven Div. of Thos. Edison Industries,	
	Products Division	Phoenix, Arizona		McGraw Edison Co.	Livingston, N. J.
05277	Westinghouse Electric Corp.		16299	Corning Glass Works,	
	Semi-Conductor Dept.	Youngwood, Pa.		Electronic Components Div.	Raleigh, N. C.
05347	Ultronix, Inc.	Grand Junction, Colo.	16758	Delco Radio Div. of General Motors Corp.	Kokomo, Ind.
06486	North American Electronics, Inc.	Lynn, Mass.	18083	Clevite Corp., Semiconductor Div.	Palo Alto, Calif.
06540	Amatom Electronic Hardware Co, Inc.	New Rochelle, N. Y.	19315	The Bendix Corp., Eclipse Pioneer Div.	Teterboro, N. J.

FROM: F. S. C. Handbook Supplements
H4-1 October, 1965.
H4-2 October, 1965.

6-8 CODE LIST OF MANUFACTURERS (Sheet 2 of 3) CONT'D.

CODE NO.	MANUFACTURER	ADDRESS	CODE NO.	MANUFACTURER	ADDRESS
19701	Electra Mfg. Co.	Independence, Mo.	73293	Hughes Components Division of Hughes Aircraft Co.	Newport Beach, Calif.
21520	Fansteel Metallurgical Corp.	No. Chicago, Ill.	73445	Amperex Electronic Co., Div. of North American Phillips Co., Inc.	Hicksville, N.Y.
22229	Union Carbide Corp., Linde Div., Kemet Dept.	Mountain View, Calif.	73506	Bradley Semiconductor Corp.	New Haven, Conn.
24446	General Electric Co.	Schenectady, N. Y.	73559	Carling Electric, Inc.	Hartford, Conn.
24455	General Electric Co., Lamp Division	Nela Park, Cleveland, Ohio	73734	Federal Screw Products, Inc.	Chicago, Ill.
24655	General Radio Co.	West Concord, Mass.	73978	Hardwick Hindle Co.,	
28480	Hewlett-Packard Co.	Palo Alto, Calif.		Memcor Components Div.	Huntington, Ind.
28520	Heyman Mfg. Co.	Kenilworth, N. J.	74193	Heineman Electric Co.	Trenton, N. J.
33173	G. E., Tube Dept.	Owensboro, Ky.	74545	Harvey Hubbel, Inc.	Bridgeport, Conn.
35434	Lectrohm, Inc.	Chicago, Ill.	74868	FXR Div. of Amphenol-Borg Electronics Corp.	Danbury, Conn.
37942	P. R. Mallory & Co, Inc.	Indianapolis, Ind.	75042	International Resistance Co.	Philadelphia, Pa.
42190	Muter Co.	Chicago, Ill.	75173	Howard B. Jones Div., of Cinch Mfg. Corp. (Use 71785)	New York, N. Y.
44655	Ohmite Manufacturing Co.	Skokie, Ill.	75382	Kulka Electric Corp.	Mt. Vernon, N. Y.
47904	Polaroid Corporation	Cambridge, Mass.	75915	Littlefuse, Inc.	Des Plaines, Ill.
49956	Raytheon Mfg. Co., Microwave and Power Tube Div.	Waltham, Mass.	76854	Oak Manufacturing Co.	Crystal Lake, Ill.
55026	Simpson Electric Co.	Chicago, Ill.	77068	Bendix Corp., Bendix-Pacific Div.	No. Hollywood, Calif.
56289	Sprague Electric Co.	North Adams, Mass.	77221	Phaotron Instrument and Electronic Co.	South Pasadena, Calif.
58474	Superior Electric Co.	Bristol, Conn.	77252	Philadelphia Steel and Wire Corp.	Philadelphia, Pa.
60437	Jas. H. Power Iron Works	Providence, R. I.	77342	American Machine and Foundry, Potter and Brumfield Div.	Princeton, Ind.
61637	Union Carbide Corp.	New York, N. Y.	77630	TRW Electronics, Components Div.	Camden, N. J.
63743	Ward-Leonard Electric Co.	Mt. Vernon, N. Y.	77764	Resistance Products Co.	Harrisburg, Pa.
70563	Amperite Co., Inc.	Union City, N. J.	78189	Shakeproof Div. of Illinois Tool Works	Elgin, Ill.
70903	Belden Mfg. Co.	Chicago, Ill.	78488	Stackpole Carbon Co.	St. Marys, Pa.
71400	Bussmann Mfg. Div. of McGraw-Edison Co.	St. Louis, Mo.	78553	Tinnerman Products, Inc.	Cleveland, Ohio
71450	CTS Corporation	Elkhart, Ind.	79727	Continental-Wirt Electronics Corp.	Philadelphia, Pa.
71468	I. T. T. Cannon Electric Co.	Los Angeles, Calif.	80031	Mepco Div. of Sessions Clock Co.	Morristown, N. J.
71590	Centralab Div. of Globe Union, Inc.	Milwaukee, Wis.	80294	Bourns, Inc.	Riverside, Calif.
71700	The Cornish Wire Co.	New York, N. Y.	81453	Raytheon Mfg. Co., Industrial Components Operation, Component Div.	Newton, Mass.
71744	Chicago Miniature Lamp Works	Chicago, Ill.	81483	International Rectifier Corp.	El Segundo, Calif.
71785	Cinch Mfg. Co.	Chicago, Ill.			
71984	Dow Corning Corp.	Midland, Mich.			
72619	Dialight Corporation	Brooklyn, N. Y.			
72699	General Instrument Corp., Semiconductor Div.	Newark, N. J.			
72765	Drake Mfg. Co.	Chicago, Ill.			
72982	Erie Technological Products, Inc.	Erie, Pa.			
73138	Helipot Div. of Beckman Instruments, Inc.	Fullerton, Calif.			

FROM: F. S. C. Handbook Supplements
H4-1 October, 1965.
H4-2 October, 1965.



 












 

 

CODE NO.	MANUFACTURER	ADDRESS
81751	Columbus Electronics Corp.	Yonkers, N.Y.
82219	Sylvania Electric Prod.Inc., Electronic Tube Div.	Emporium, Pa.
82389	Switchcraft, Inc.	Chicago, Ill.
82647	Metals and Controls Inc., Spencer Products	Attleboro, Mass.
82866	Research Products Corp.	Madison, Wis.
82877	Rotron Mfg. Co., Inc.	Woodstock, N.Y.
82893	Vector Electronic Co.	Glendale, Calif.
83058	Carr Fastener Co.	Cambridge, Mass.
83186	Victory Engineering Corp.	Springfield, N.J.
83298	Bendix Corp., Red Bank Div.	Eatontown, N.J.
83501	Gavitt Wire and Cable Co., Div.of Amerace Corp.	Brookfield, Mass.
83594	Burroughs Corp., Electronic Components Div.	Plainfield, N.J.
83877	Yardeny Laboratories, Inc.	New York, N.Y.
84171	Arco Electronics, Inc.	Great Neck, N.Y.
84411	TRW Capacitor Div.	Ogallala, Neb.
86684	Radio Corp. of America, Electronic Components & Devices Div. Harrison, N.J.	Anaheim, Calif.
87034	Marco Industries Co.	Lansdale, Pa.
87216	Philco Corp. (Lansdale Div.)	Philadelphia, Pa.
87575	Stockwell Rubber Cq, Inc.	Lincoln, Ill.
88140	Cutler-Hammer, Inc.	Lincoln, Ill.
89473	General Electric Distributing Corp.	Schenectady, N.Y.
91345	Miller Dial and Nameplate Company	El Monte, Calif.
91637	Dale Electronics, Inc.	Columbus, Neb.
91662	Elco Corp.	Willow Grove, Pa.
91929	Honeywell, Inc., Micro- Micro-Switch Div.	Freeport, Ill.
93332	Sylvania Electric Prod., Inc. Semiconductor Prod. Div.	Woburn, Mass.
93410	Stevens Mfg. Co., Inc.	Mansfield, Ohio
94144	Raytheon Co., Components Div., Industrial Components Operation	Quincy, Mass.
94154	Tung-Sol Electric, Inc.	Newark, N.J.
94310	Tru-Ohm Products, Memcor Components Div.	Huntington, Ind.
95263	Leecraft Mfg. Co., Inc.	Long Island City, N.Y.
96791	Amphenol Controls Div. of Amphenol- Borg Electronics Corp.	Janesville, Wis.
98291	Seaelectro Corp.	Mamaroneck, N.Y.
98978	International Electronic Research Corp.	Burbank, Calif.
THE FOLLOWING H-P VENDORS HAVE NO NUMBERS ASSIGNED IN THE LATEST SUPPLEMENT TO THE FEDERAL SUPPLY CODE FOR MANUFACTURERS HANDBOOK.		
0000	Cooltron	Oakland, Calif.

THE FOLLOWING H-P VENDORS HAVE NO NUMBERS ASSIGNED IN THE LATEST SUPPLEMENT TO THE FEDERAL SUPPLY CODE FOR MANUFACTURERS HANDBOOK.

0000	Cooltron	Oakland, Calif.
------	----------	-----------------

FROM: F. S. C. Handbook Supplements
H4-1 October, 1965.
H4-2 October, 1965.

Reference Designator	Description	Quantity	Mfr. Part # or Type	Mfr.	Mfr. Code	Stock No.	RS
C1	fxd, elect 5 μ f 65Vdc	1	D33689	Sprague	56289	0180-1836	1
C2, 4, 6-8, 12, 13	NOT ASSIGNED	-	-	-	-	-	-
C3	fxd, film .0022 μ f 200Vdc	1	192P22292	Sprague	56289	0160-0154	1
C5	fxd, elect 100 μ f 50Vdc	1	D32218	Sprague	56289	0180-1852	1
C9	fxd, elect 490 μ f 75Vdc	1	D38618	Sprague	56289	0180-1888	1
C10, 11A	fxd, CERAMIC .02 μ f 600Vdc	2	Z5U-203Z	Erie	72982	0150-0024	1
C14	fxd, elect 100 μ f 65Vdc	1	D70704	Sprague	56289	0180-1853	1
CR1, 2, 4, 13	Rect. si. 250mA 200PRV	4		ϕ	09182	1901-0033	4
CR5, 6, 8, 9, 12	NOT ASSIGNED	-	-	-	-	-	-
CR7, 10, 11, 14-18	Rect. si. 500mA 200PRV	8	1N 3253	R. C. A.	02735	1901-0389	6
DS1	Lamp - neon, Red, Clear	1	6141-000-603	Drake	72765	1450-0361	1
F1	Fuse cartridge 1A, 250V 3AG	1	312001	Littlefuse	75915	2110-0001	5
Q1, 2, 3	SS NPN si.	3	2N 3391	G. E.	03508	1854-0071	3
Q4	SS PNP si.	1	MPS 6517	Motorola	04713	1853-0065	1
Q5, 11	SS PNP si.	2	40362	R. C. A.	02735	1853-0041	2
Q6, 8, 10	NOT ASSIGNED	-	-	-	-	-	-
Q7	Power NPN si.	1		ϕ	09182	1854-0239	1
Q9	SS NPN si.	1	2N 3417	G. E.	03508	1854-0087	1
R1	fxd, ww 1K Ω \pm 5% 3w	1	242E1025	Sprague	56289	0813-0001	1
R2	fxd, met. film 6.2K Ω \pm 1% 1/8w	1	Type CEA T-O	I. R. C.	07716	0698-5087	1
R3, 4	fxd, met. film 23K Ω \pm 1% 1/8w	2	Type CEA T-O	I. R. C.	07716	0698-3269	1
R5	fxd, comp 360K Ω \pm 5% 1/2w	1	EB-3645	A. B.	01121	0686-3645	1
R6	fxd, met. film 1.5K Ω \pm 1% 1/8w	1	Type CEA T-O	I. R. C.	07716	0757-0427	1
R7	fxd, comp 560K Ω \pm 5% 1/2w	1	EB-5645	A. B.	01121	0686-5645	1
R8, 9, 15, 22, 23, 28, 29, 36, 39	NOT ASSIGNED	-	-	-	-	-	-
R10	var. ww 100 Ω \pm 5%	1		ϕ	09182	2100-1987	1
R11	var. ww 10K Ω \pm 5%	1		ϕ	09182	2100-1854	1
R12	fxd, ww 1.2K Ω \pm 5% 3w	1	242E1225	Sprague	56289	0811-1208	1
R14	fxd, comp 24 Ω \pm 5% 1/2w	1	EB-2405	A. B.	01121	0686-2405	1
R16	fxd, comp 4.7K Ω \pm 5% 1/2w	1	EB-4725	A. B.	01121	0686-4725	1
R17	fxd, comp 6.2K Ω \pm 5% 1/2w	2	EB-6225	A. B.	01121	0686-6225	1
R18, 37	fxd, comp 12K Ω \pm 5% 1/2w	1	EB-1235	A. B.	01121	0686-1235	1
R19	fxd, comp 1K Ω \pm 5% 1/2w	1	EB-1025	A. B.	01121	0686-1025	1
R20	fxd, met. film 2K Ω \pm 5% 2w	1	Type C42S	Corning	16299	0764-0025	1
R21	fxd, comp 240 Ω \pm 5% 1/2w	1	EB-2415	A. B.	01121	0686-2415	1
R24	fxd, comp 3.6K Ω \pm 5% 1w	1	GB-3625	A. B.	01121	0689-3625	1
R25	fxd, comp 510 Ω \pm 5% 1/2w	1	EB-5115	A. B.	01121	0686-5115	1
R26	fxd, comp 180 Ω \pm 5% 1/2w	1	EB-1815	A. B.	01121	0686-1815	1
R27	fxd, comp 820 Ω \pm 5% 1/2w	1	EB-8215	A. B.	01121	0686-8215	1
R30	fxd, comp 1.8K Ω \pm 5% 1/2w	1	EB-1825	A. B.	01121	0686-1825	1
R31	fxd, comp 750 Ω \pm 5% 1/2w	1	EB-7515	A. B.	01121	0686-7515	1
R32	fxd, met. oxide 3K Ω \pm 5% 2w	1	Type C42S	Corning	16299	0698-3642	1
R33	fxd, ww 6 Ω \pm 0.5% 3W 10ppm	1	Type T-3	R. C. L.	01686	0811-2499	1
R34	STRAP	-	-	-	-	-	-
R35	fxd, met. film 1.3K Ω \pm 0.5% 1/4w	1	Type CEB T-O	I. R. C.	07716	0757-0735	1
R36	fxd, comp 56 Ω \pm 5% 1/2w	1	EB-5605	A. B.	01121	0686-5605	1
R38	fxd, met. film 60.4K Ω \pm 1% 1/8w	1	Type CEA T-O	I. R. C.	07716	0698-3572	1

Reference Designator	Description	Quantity	Mfr. Part # or Type	Mfr.	Mfr. Code	 Stock No.	RS
R40	fxd, comp 68K Ω \pm 5% $\frac{1}{2}$ W	1	EB-6835	A. B.	01121	0686-6835	1
R47	var. ww 250 \pm 20%	1	Type 110-F4	C. T. S.	11236	2100-0439	1
R50	var. ww 100 Ω \pm 20%	1	Type 110-F4	C. T. S.	11236	2100-0281	1
S1	Switch, Toggle-Power	1	MST-105D	Alco	95146	3101-0163	1
S2	Slide switch, DPDT, solder terminals, $\frac{1}{2}$ " knob	1	11A-1138	Switchcraft	82389	3101-1172	1
T1	Power transformer	1			09182	9100-2182	1
VR1, 4	Zener, 12.4V \pm 5% 400mW	2			09182	1902-3185	2
VR2	Zener, 4.22V \pm 5% 400mW	1			09182	1902-3070	1
VR3, 7	Zener, 6.19V \pm 5% 400mW	2			09182	1902-0049	2
VR5	NOT ASSIGNED	-	-	-	-	-	-
VR6	Zener, 6.2V \pm 5%	1	1N 821	N. A.	06486	1902-0761	1
	Printed Circuit Board Assembly (includes components)	1			09182	06217-60020	
	P. C. Board (Blank)	1			09182	5020-5597	
	Rear Panel Assembly	1			09182	4040-0052	
	Heat Sink	1			09182	0050-0064	
	Front Panel Assembly	1			09182	06217-60001	
	Bottom Cover	1			09182	4040-0051	
	Top Cover	1			09182	4040-0050	
	5 Way binding post (maroon)	1			09182	1510-0040	1
	5 Way binding post (black)	2	DF21C	Superior	58474	1510-0039	1
	Meter 2 $\frac{1}{4}$ " DUAL SCALE 0-60V, 0-300mA	1			09182	1120-1142	1
	Bezel	1			09182	5040-0651	1
	Spring	4			09182	1460-0256	1
	Line cord	1	KH-4096	Beldon	70903	8120-0050	1
	Strain relief bushing	1	SR-5P-1	Heyco	28520	0400-0013	1
	Fuseholder Assembly	1	342014	Littlefuse	75915	1400-0084	1
	Lockwasher	1	1224-08	Shakeproof	78189	2190-0037	1
	Neoprene washer	1	901-2	Littlefuse	75915	1400-0090	1
	Nut	1	903-12	Littlefuse	75915	2950-0038	1
	Mica insulator	1	734	Reliance	08530	0340-0174	1
	Insulator	2			09182	0340-0166	2
	Insulator	2			09182	0340-0168	2
	Knob $\frac{1}{4}$ " insert pointer	2			09182	0370-0084	1
	Fastener-Speed clip, push on	2	C8623-014-24B	Tinnerman	89032		1
	Socket indicator light (DS1)	1	2K	Eldema	03797	1450-0358	1
	Fastener	1	C17373-012-24B	Tinnerman	89032	0510-0123	1

APPENDIX I

MANUAL BACKDATING CHANGES

Manual backdating changes describe changes necessary to adapt this manual to earlier instruments. To adapt the manual to serial numbers prior to 7D0401 (6215A) and 7D0501 (6217A), make the changes indicated in the table below:

Instrument Serial No.	Make Manual Changes
(6215A) 7D0100 - 7D0400	1
(6217A) 7D0100 - 7D0500	1

Any changes necessary to adapt the manual to serial numbers above 7D0400 (6215A) or 7D0500 (6217A) are included on a yellow Manual Changes insert at the front of the manual.

CHANGE 1

Page 3-1, paragraph 3-2d. **Change current limit as follows:**

6215A 550 ± 10mA

6217A 310 ± 10mA

Page 3-1, paragraph 3-8. **Change current limit as follows:**

6215A 300 - 630mA

6217A 200 - 350mA

Page 4-1, figure 4-1. **Delete** amplifier Q3

Page 4-2, paragraph 4-10. **Change to:**

4-10 When the external load resistance decreases, the output current increases until the current limit is reached. The negative voltage developed across R33 and R50 forward biases CR4 controlling the conduction of Q5 and Q7. Any further decreases in load resistance increase the negative voltage on the base of Q5 which decreases the conduction of Q7. Thus, through feedback action the output current is limited to the value at which CR4 conducts.

Page 4-3, paragraph 4-21. **Change to:**

4-21 Current limiting occurs when diode CR4 becomes forward biased. Its anode potential is determined by the voltage at the base of Q5. The cathode potential of CR4 is determined by the voltage drop across current limit potentiometer R50 which, in turn is connected across the current sampling resistor. The cathode potential of CR4 is a function of the output current. As this current increases, the drop across the sampling network increases, and CR4 will start to conduct. Conduction of this diode clamps the base of Q5 to a potential which decreases the conduction of the series regulator, thus limiting the output current. Potentiometer R50 permits the cathode potential of CR4 to be varied and thus changes the current limiting threshold.

Page 5-7, paragraph 5-39c. **Change:**

475 ± 10mA to 550 ± 10mA

250 ± 10mA to 250 ± 10mA

Page 6-5 and overall schematic at rear of manual. **Change to:**

C10-12 fxd, ceramic .02μf 600Vdc 3 Type ED.02 Erie 72982 0150-0024 1

R16,17 fxd, comp 6.2KΩ ±5% ½ w 2 EB-6225 A.B. 01121 0686-6225 1

S2 Slide switch, 3PDT, ½" knob, solder terminal 1 11A-1138 Switchcraft 82389 3101-1172 1

Delete: CR13, Q3, R14, R36, R37, and VR2


Add: CR3 Rect. Si. 400mW 10PRV 1  09182 1901-0460 1

On overall schematic at rear of manual

Delete Q3 and connect wiper of R50 to cathode of CR4.

Delete R36 and connect R50 to +S.

Add CR3; connect cathode to TP3 and anode to +S.

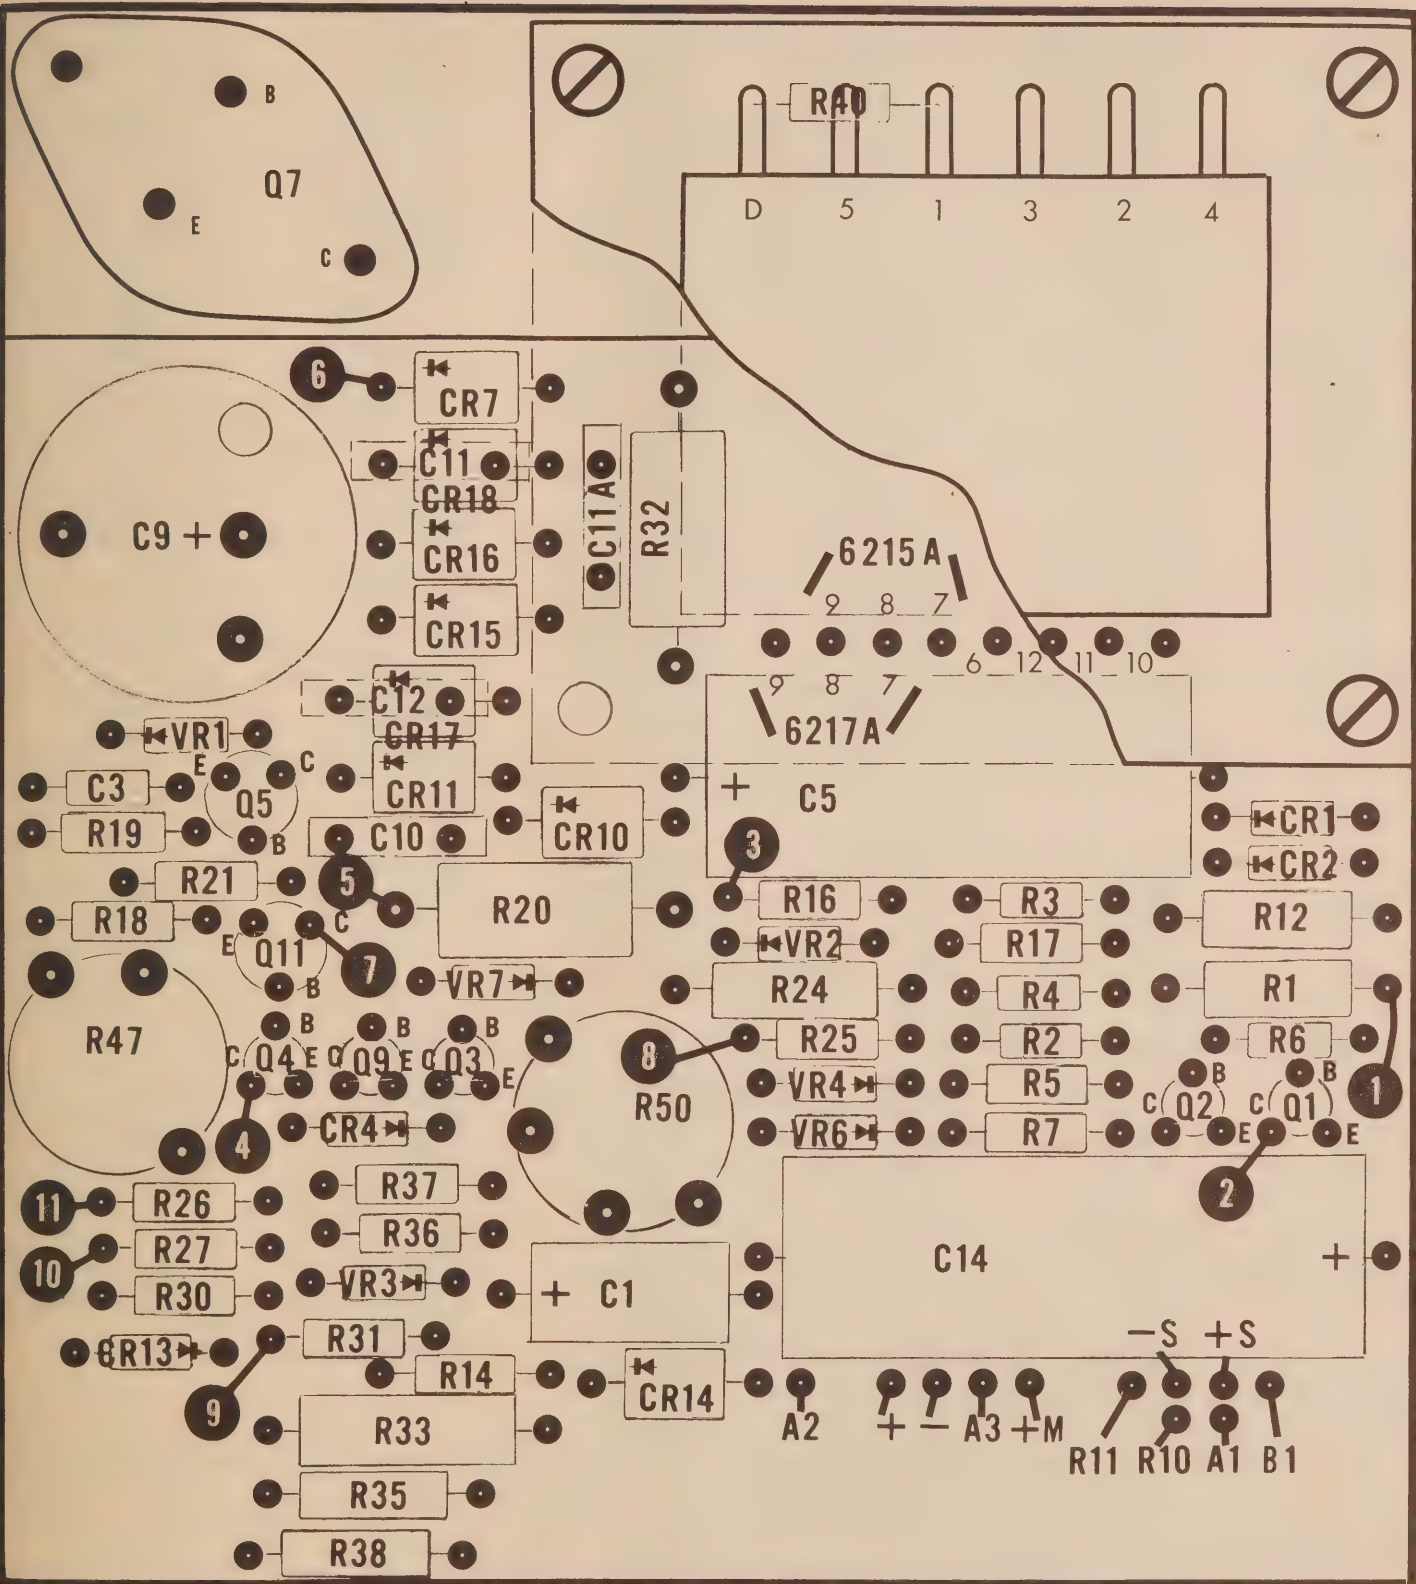

APPENDIX I

MANUAL BACKDATING CHANGES

Manual backdating changes describe changes necessary to adapt this manual to earlier instruments. To adapt the manual to serial numbers prior to 7D0401 (6215A) and 7D0501 (6217A), make the changes indicated in the table below:

Instrument Serial No.	Make Manual Changes
(6215A) 7D0100 - 7D0400	1
(6217A) 7D0100 - 7D0500	1

Any changes necessary to adapt the manual to serial numbers above 7D0400 (6215A) or 7D0500 (6217A) are included on a yellow Manual Changes insert at the front of the manual.

CHANGE 1

Page 3-1, paragraph 3-2d. **Change current limit as follows:**

6215A 550 \pm 10mA

6217A 310 \pm 10mA

Page 3-1, paragraph 3-8. **Change current limit as follows:**

6215A 300 - 630mA

6217A 200 - 350mA

Page 4-1, figure 4-1. **Delete** amplifier Q3

Page 4-2, paragraph 4-10. **Change to:**

4-10 When the external load resistance decreases, the output current increases until the current limit is reached. The negative voltage developed across R33 and R50 forward biases CR4 controlling the conduction of Q5 and Q7. Any further decreases in load resistance increase the negative voltage on the base of Q5 which decreases the conduction of Q7. Thus, through feedback action the output current is limited to the value at which CR4 conducts.

Page 4-3, paragraph 4-21. **Change to:**

4-21 Current limiting occurs when diode CR4 becomes forward biased. Its anode potential is determined by the voltage at the base of Q5. The cathode potential of CR4 is determined by the voltage drop across current limit potentiometer R50 which, in turn is connected across the current sampling resistor. The cathode potential of CR4 is a function of the output current. As this current increases, the drop across the sampling network increases, and CR4 will start to conduct. Conduction of this diode clamps the base of Q5 to a potential which decreases the conduction of the series regulator, thus limiting the output current. Potentiometer R50 permits the cathode potential of CR4 to be varied and thus changes the current limiting threshold.

Page 5-7, paragraph 5-39c. **Change:**

475 \pm 10mA to 550 \pm 10mA

250 \pm 10mA to 250 \pm 10mA

Page 6-5 and overall schematic at rear of manual. **Change to:**

C10-12 fxd, ceramic .02 μ f 600Vdc 3 Type ED.02 Erie 72982 0150-0024 1

R16,17 fxd, comp 6.2K Ω \pm 5% $\frac{1}{2}$ w 2 EB-6225 A.B. 01121 0686-6225 1

S2 Slide switch, 3PDT,
 $\frac{1}{2}$ " knob, solder terminal 1 11A-1138 Switchcraft 82389 3101-1172 1

Delete: CR13, Q3, R14, R36, R37, and VR2

Add: CR3 Rect. Si. 400mW 10PRV 1  09182 1901-0460 1


On overall schematic at rear of manual

Delete Q3 and connect wiper of R50 to cathode of CR4.


Delete R36 and connect R50 to +S.

Add CR3; connect cathode to TP3 and anode to +S.

-06217-91001-1			
SYM	REVISIONS	APPROVED	DATE
A	AS ISSUED	B.W. Dudley	5-31-67
B	ECN 1109 & ECN 1131-RUN 3	J. LEBER	7-13-67
C	CHANGED Q3 POSITION	H. CLYMER	8-7-67

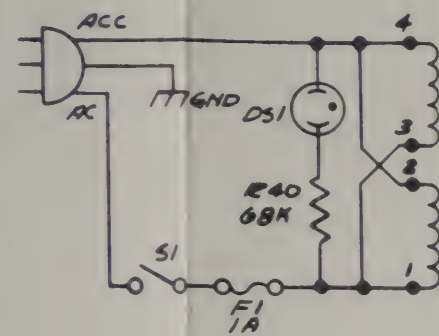

S2
A3 O A20 O A1
B3 O B20 O B1
C3 O C20 O C1

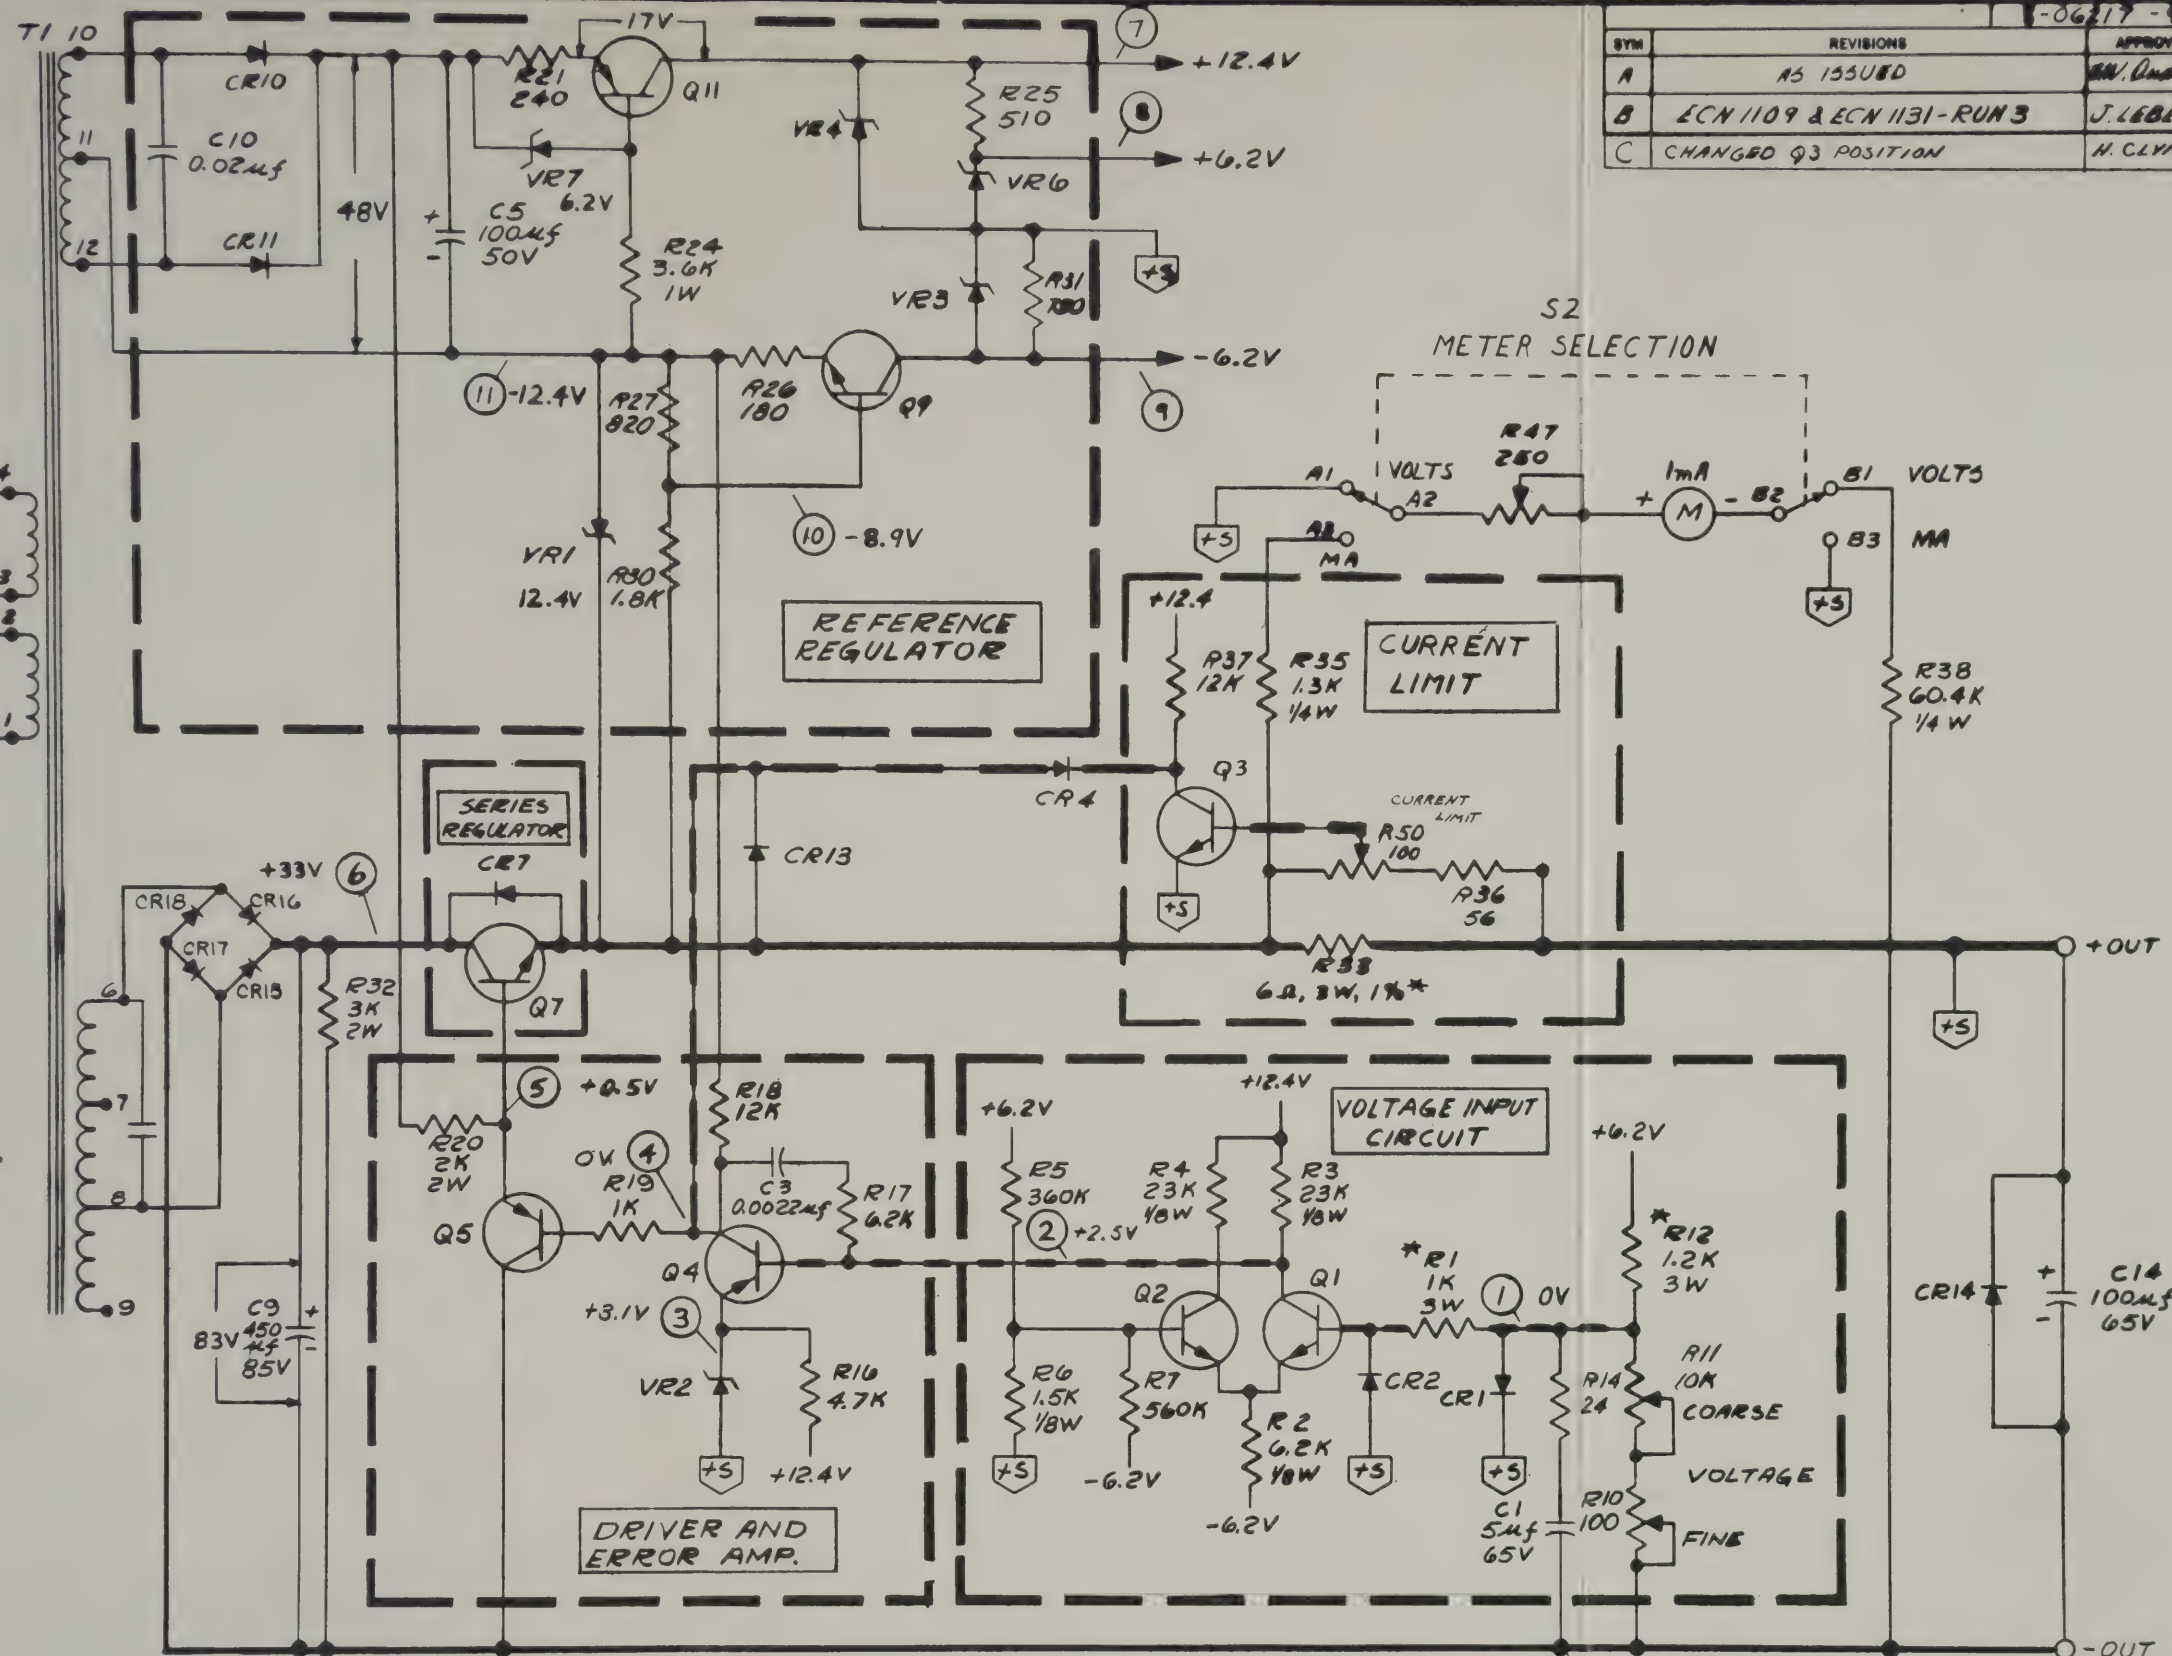

- NOTES:
- ALL RESISTORS ARE 1/2WATT, 5% UNLESS OTHERWISE SPECIFIED.
 - ALL 1/8 AND 1/4 WATT RESISTORS ARE $\pm 1\%$, 100PPM.
 - * DENOTES 20PPM WIRE TEMPERATURE COEFFICIENT.
 - METER SWITCH S2 AS VIEWED FROM REAR; SEE ABOVE.
 - DENOTES VOLTAGE FEEDBACK SIGNAL.
 - DENOTES CURRENT FEEDBACK SIGNAL.
 - TRANSFORMER SHOWN STRAPPED FOR 115VAC OPERATION. SEE INSTRUCTION MANUAL FOR 220 VAC.
 - DC VOLTAGES WERE MEASURED UNDER THE FOLLOWING CONDITIONS:
 - SIMPSON MODEL 269 OR EQUIVALENT
 - 115 VAC INPUT
 - VOLTAGES REFERENCED TO +S UNLESS OTHERWISE NOTED
 - VOLTAGES ARE TYPICAL, $\pm 10\%$ UNLESS OTHERWISE NOTED
 - ALL READINGS TAKEN IN CONSTANT VOLTAGE OPERATION AT MAXIMUM RATED OUTPUT WITH NO LOAD CONNECTED.

ENG. RESP. — DIV. 21	ITEM	QTY	DESCRIPTION	PART NO.	DWG. NO.	MAT'L SPEC.
UNLESS OTHERWISE NOTED — TOLERANCES —	DRAWN		DATE	TITLE		
0.XX ± 0.02 0.XXX ± 0.005	G. SYZONENKO		5/31/67	SCHEMATIC MODEL 6217A		NEWLETT & PACKARD LABORATORY INSTRUMENTS
ANGULAR \pm	ENGINEER		5/31/67			
MACHINED SURFACES 63	APPROVED		5/31/67			
— DO NOT SCALE —	SUPERSEDED			FINISH	SCALE	NEXT ASSY.
						C-06217-91001-1

PACKARD

ION SALES AND SERVICE



SOURI

Wyoming Place
as City 64114
(816) 333-2445
910-771-2087
South Brentwood Blvd.
ouis 63144
(314) 644-0220
910-760-1670

JERSEY

Grand Avenue
wood 07631
(201) 567-3933
710-991-9707

MEXICO

Box 8366
on C. 87108
Lomas Boulevard N.E.
uerque
(505) 255-5586
910-989-1665
Wyatt Drive
ruces 88001
(505) 526-2485
910-983-0550

YORK

Central Avenue
y 12205
(518) 869-8462
Campville Road
ott 13760
(607) 754-0050
510-252-0890
East 75th Street
ork 10021
(212) 879-2023
710-581-4376

82 Washington Street
Poughkeepsie 12601
Tel: (914) 454-7330
TWX: 510-248-0012

39 Saginaw Drive
Rochester 14623
Tel: (716) 473-9500
TWX: 510-253-5981

1025 Northern Boulevard
Roslyn, Long Island 11576
Tel: (516) 869-8400
TWX: 510-223-0811

5858 East Molloy Road
Syracuse 13211
Tel: (315) 454-2486
TWX: 710-541-0482

NORTH CAROLINA

P.O. Box 5187
1923 North Main Street
High Point 27262
Tel: (919) 882-6873
TWX: 510-926-1516

OHIO

5579 Pearl Road
Cleveland 44129
Tel: (216) 884-9209
TWX: 810-421-8500

2460 South Dixie Drive
Dayton 45439
Tel: (513) 298-0351
TWX: 810-459-1925

OREGON

Westhills Mall, Suite 158
4475 S.W. Scholls Ferry Road
Portland 97225
Tel: (503) 292-9171
TWX: 910-464-6103

PENNSYLVANIA

2500 Moss Side Boulevard
Monroeville 15146
Tel: (412) 271-0724
TWX: 710-797-3650
144 Elizabeth Street
West Conshohocken 19428
Tel: (215) 248-1600, 828-6200
TWX: 510-660-8715

TEXAS

P.O. Box 7166
3605 Inwood Road
Dallas 75209
Tel: (214) 357-1881
TWX: 910-861-4081

P.O. Box 22813
4242 Richmond Avenue
Houston 77027
Tel: (713) 667-2407
TWX: 910-881-2645

GOVERNMENT CONTRACT OFFICE

225 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-4171
TWX: 910-871-1170

UTAH

2890 South Main Street
Salt Lake City 84115
Tel: (801) 486-8166
TWX: 910-925-5681

VIRGINIA

P.O. Box 6514
2111 Spencer Road
Richmond 23230
Tel: (703) 282-5451
TWX: 710-956-0157

WASHINGTON

11656 N.E. Eighth Street
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2303

04; Tel: (415) 326-7000; TWX: 910-373-1267; Telex: 34-8461

ARIO

Hewlett-Packard (Canada) Ltd.
ady Ellen Place
a 3
(613) 722-4223
610-562-1952

Hewlett-Packard (Canada) Ltd.

1415 Lawrence Avenue West
Toronto
Tel: (416) 249-9196
TWX: 610-492-2382

QUEBEC

Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
Pointe Claire
Tel: (514) 697-4232
TWX: 610-422-3022
Telex: 01-2819

alif. 94304; Tel: (415) 326-7000; TWX: 910-373-1267; Telex: 034-8461; Cable: HEWPACK Palo Alto

CO

Hewlett-Packard Mexicana,
de C.V.
ia 408, Dept. 1
o 12, D.F.
3-03-79

PERU

Fernando Ezeta B.
Av. Petit Thouars 4719
Miraflores
Casilla 3061
Lima
Tel: 50346
Cable: FEPERU Lima

URUGUAY

Pablo Ferrando
S.A. Comercial e Industrial
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel: 40-3102
Cable: RADIUM Montevideo

AGUA

to Terán G.
to Terán
do Postal 689
ua
451, 3452
ROTERAN Managua

PUERTO RICO

San Juan Electronics, Inc.
P.O. Box 5167
Ponce de León 150, Stop 3
Puerta de Tierra Santa
San Juan 00906
Tel: (809) 725-3342
Cable: SATRONICS San Juan

VENEZUELA

Citec, C.A.
Edif. Arisan-Of. #4
Avda. Francisco de Miranda
Apartado del Este 10934 Chacaito
Caracas
Tel: 71.88.05
Cable: CITECAL Caracas

IMA

ónica Balboa, S.A.
ox 4929
Manuel Espinosa No. 13-50
Alina
la City
0833
ELECTRON Panama City

alif. 94304; Tel: (415) 326-7000; TWX: 910-373-1267; Telex: 034-8461; Cable: HEWPACK Palo Alto

ELECTRONIC INSTRUMENTATION SALES AND SERVICE

EUROPE

AUSTRIA

Unilabor H.m.b.H.
Wissenschaftliche Instrumente
Rummelhardtgasse 6/3
P.O. Box 33
Vienna IX/71
Tel: 426 181
Cable: LABORINSTRUMENT
Vienna

BELGIUM

Hewlett-Packard Benelux S.A.
20-24 rue de l'Hôpital
Brussels
Tel: 11 22 20
Cable: PALOBEN Brussels

DENMARK

Tage Olsen A/S
Ronnegade 1
Copenhagen o
Tel: 29 48 00
Cable: TOCOPEN Copenhagen

FINLAND

INTO O/Y
Merittulinkatu 11
P.O. Box 10153
Helsinki 10
Tel: 61 133
Cable: INTO Helsinki

FRANCE

Hewlett-Packard France
2 rue Tête d'Or
Lyon, 6 - Rhône
Tel: 52 35 66
Hewlett-Packard France
150 Boulevard Massena
Paris 13e
Tel: 707 97 19
Cable: HEWPAK Paris

GERMANY

Hewlett-Packard Vertriebs-GmbH
Lietzenburger Strasse 30
1 Berlin W 30
Tel: 24 86 36

Hewlett-Packard Vertriebs-GmbH
Herrenberger Strasse 110
703 Böblingen, Württemberg
Tel: 07031-6971
Cable: HEPAK Böblingen

Hewlett-Packard Vertriebs-GmbH
Achenbachstrasse 15
4 Düsseldorf 1
Tel: 68 52 58/59

Hewlett-Packard Vertriebs-GmbH
Kurfürstenstrasse 95
6 Frankfurt 50
Tel: 52 00 36
Cable: HEWPAKSA Frankfurt

Hewlett-Packard Vertriebs-GmbH
Beim Strohhaus 26
2 Hamburg 1
Tel: 24 05 51/52
Cable: HEWPAKSA Hamburg

Hewlett-Packard Vertriebs-GmbH
Reginfriedstrasse 13
8 Munich 9
Tel: 69 51 21/22
Cable: HEWPAKSA Munich

GREECE

Kostos Karayannis
18, Ermou Street
Athens 126
Tel: 230 301
Cable: RAKAR Athens

IRELAND

Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks, England
Tel: Slough 28406-9, 29486-9
Cable: HEWPIE Slough

ITALY

Hewlett-Packard Italiana S.p.A.
Viale Lunigiana 46
Milan
Tel: 69 15 84
Cable: HEWPACIT Milan

Hewlett-Packard Italiana S.p.A.
Palazzo Italia
Piazza Marconi 25
Rome - Eur
Tel: 591 2544
Cable: HEWPACIT Rome

NETHERLANDS

Hewlett-Packard Benelux, N.V.
de Boelelaan 1043
Amsterdam, Z.2
Tel: 42 77 77
Cable: PALOBEN Amsterdam

NORWAY

Morgenstjerne & Co. A/S
Ingeniofirma
6 Wessels Gate
Oslo
Tel: 20 16 35
Cable: MOROF Oslo

PORTUGAL

Telectra
Rua Rodrigo da Fonseca 103
P.O. Box 2531
Lisbon 1
Tel: 68 60 72
Cable: TELECTRA Lisbon

SPAIN

Ataio Ingerieros
Urgel, 259
Barcelona, 11
Tel: 230-69-88

Ataio Ingenieros
Enrique Larreta 12
Madrid, 16
Tel: 235 43 44
Cable: TELEATAIO Madrid

SWEDEN

HP Instrument AB
Hagakergatan 7
Möndal
Tel: 031 - 27 68 00

HP Instrument AB
Centralvägen 28
Solna
Tel: 08 - 83 08 30
Cable: MEASUREMENTS
Stockholm

SWITZERLAND

HEWPAK AG
508 Tolland Street
Zürcherstrasse
8952 Schlieren
Zürich
Tel: (051) 98 18 21
Cable: HEWPAKAG Zurich

TURKEY

Telekom Engineering Bureau
P.O. Box 376 - Galata
Istanbul
Tel: 49 40 40
Cable: TELEMATIION Istanbul

UNITED KINGDOM

Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks
Tel: (051) 98 18 21
Cable: HEWPAKAG Zurich

YUGOSLAVIA

Belram S.A.
83 avenue des Mimosas
Brussels 15, Belgium
Tel: 35 29 58
Cable: BELRAMEL Brussels

FOR AREAS NOT LISTED, CONTACT: Hewlett-Packard S.A.; 54 Route des Acacias; Geneva, Switzerland; Tel: (022) 42 81 50; Telex: 2.24.86; Cable: HEWPAKSA Geneva

AFRICA, ASIA, AUSTRALIA

AUSTRALIA

Hewlett-Packard Australia
Pty. Ltd.
22-26 Weir Street
Glen Iris, S. E. 6
Victoria
Tel: 20-1371 (4 lines)
Cable: HEWPARD Melbourne

Hewlett-Packard Australia
Pty. Ltd.

4 Grose Street
Glebe, New South Wales
Tel: 211-2235, 211-2888
Cable: HEWPARD Sydney

CEYLON

United Electricals Ltd.
P.O. Box 681
Yahala Building
Staples Street
Colombo 2
Tel: 5496
Cable: HOTPOINT Colombo

ETHIOPIA

African Salespower & Agency
Private Ltd., Co.
P.O. Box 718
Addis Ababa
Tel: 44090
Cable: ASACO Addisababa

HONG KONG

Schmidt & Co. (Hong Kong) Ltd.
P.O. Box 297
1511, Prince's Building
10, Chater Road
Hong Kong
Tel: 240168, 232735
Cable: SCHMIDTCO Hong Kong

INDIA

The Scientific Instrument
Co., Ltd.
6, Tej Bahadur Sapru Road
Allahabad 1
Tel: 2451
Cable: SICO Allahbad

The Scientific Instrument
Co., Ltd.
240, Dr. Dadabhai Naoroji Road
Bombay 1
Tel: 26-2642
Cable: SICO Bombay

The Scientific Instrument
Co., Ltd.
11, Esplanade East
Calcutta 1
Tel: 23-4129
Cable: SICO Calcutta

The Scientific Instrument Co., Ltd.
30, Mount Road
Madras 2
Tel: 86339
Cable: SICO Madras

The Scientific Instrument Co., Ltd.
B-7, Ajmeri Gate Extn.
New Delhi 1
Tel: 27-1053
Cable: SICO New Delhi

IRAN

Telecom, Ltd.
P.O. Box 1812
Teheran
Tel: 43850, 48111
Cable: BASCOM Teheran

ISRAEL

Electronics & Engineering
Div. of Motorola Israel Ltd.
16, Kremnetski Street
Tel-Aviv
Tel: 35021/2/3
Cable: BASTEL Tel-Aviv

JAPAN

Yokogawa-Hewlett-Packard Ltd.
Shinhankyu Building
No. 8, Umeda
Kita-ku, Osaka City
Tel: 0726-23-1641

Yokogawa-Hewlett-Packard Ltd.
Ito Building
No. 59, Kotori-cho
Nakamura-ku, Nagoya City
Tel: 551-0215

Yokogawa-Hewlett-Packard Ltd.
Ohashi Building
No. 59, I-chome, Yoyogi
Shibuya-ku, Tokyo
Tel: 370-2281
Cable: YOKOHEWPAK Tokyo
Tel: 232-2034

KENYA

R. J. Tilbury Ltd.
P.O. Box 2754
Suite 517/518
Hotel Ambassadeur
Nairobi
Tel: 25670, 26803, 68206
Cable: ARJAYTEE Nairobi

KOREA

American Trading Co., Korea, Ltd.
Seoul P. O. Box 1103
112-35 Sokong-Dong
Jung-ku, Seoul
Tel: 3.7049, 3.7613
Cable: AMTRACO Seoul

LEBANON

Constantin E. Macridis
Clmenceau Street
Clemenceau Center
Beirut
Tel: 220846
Cable: ELECTRONUCLEAR Beirut

MALAYSIA

MECOMB Malaysia Ltd.
2 Lorong 13/6A
Section 13
Petaling Jaya, Selangor
Cable: MECOMB Kuala Lumpur

NEW ZEALAND

Sample Electronics (N.Z.) Ltd.
8 Matipo Street
Onehunga S.E. 5
Auckland
Tel: 667-356
Cable: ELPMAS Auckland

PAKISTAN (EAST)

Mushko & Company, Ltd.
31, Jinnah Avenue
Dacca
Tel: 80058
Cable: COOPERATOR Dacca

PAKISTAN (WEST)

Mushko & Company, Ltd.
Osman Chambers
Victoria Road
Karachi 3
Tel: 51027, 52927
Cable: COOPERATOR Karachi

SINGAPORE

Mechanical and Combustion
Engineering Company Ltd.
9, Jalan Kilang
Singapore, 3
Tel: 642361-3
Cable: MECOMB Singapore

SOUTH AFRICA

F. H. Flanter & Co. (Pty.), Ltd.
Rosella House
Buitencingle Street
Cape Town
Tel: 3-3817
Cable: AUTOPHONE Cape Town

F. H. Flanter & Co. (Pty.), Ltd.
104 Pharmacy House
80 Jorissen Street
Braamfontein, Johannesburg
Tel: 724-4172

TAIWAN

Hwa Sheng Electronic Co., Ltd.
P. O. Box 1558
21 Nanking West Road
Taipei
Tel: 46076, 45936
Cable: VICTRONIX Taipei

THAILAND

The International
Engineering Co., Ltd.
P. O. Box 39
614 Sukhumvit Road
Bangkok
Tel: 913460-1-2
Cable: GYSOM Bangkok

VIETNAM

Landis Brothers and Company,
Inc.
P.O. Box H-3
216 Hien-Vuong
Saigon
Tel: 20.805
Cable: LANBROCOMP Saigon

FOR AREAS NOT LISTED, CONTACT: Hewlett-Packard Export Marketing; 1501 Page Mill Road; Palo Alto, California 94304; Tel: (415) 326-7000; Telex: 034-8461; Cable: HEWPAK Palo Alto

ELECTRONIC INSTRUMENTATION SALES AND SERVICE

UNITED STATES

ALABAMA

P.O. Box 4207
2003 Byrd Spring Road S.W.
Huntsville 35802
Tel: (205) 881-4591
TWX: 810-726-2204

ARIZONA

3009 North Scottsdale Road
Scottsdale 85251
Tel: (602) 945-7601
TWX: 910-950-1282

232 South Tucson Boulevard
Tucson 85716
Tel: (602) 623-2564
TWX: 910-952-1162

3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2170

1101 Embarcadero Road
Palo Alto 94303
Tel: (415) 327-6500
TWX: 910-373-1280

2591 Carlsbad Avenue
Sacramento 95821
Tel: (916) 482-1463
TWX: 910-367-2092

1055 Shafter Street
San Diego 92106
Tel: (714) 223-8103
TWX: 910-335-2000

COLORADO

7965 East Prentice
Englewood 80110
Tel: (303) 771-3455
TWX: 910-935-0705

GEORGIA

P.O. Box 28234
2340 Interstate Parkway
Atlanta 30328
Tel: (404) 436-6181
TWX: 810-766-4890

ILLINOIS

5508 Howard Street
Skokie 60076
Tel: (312) 677-0400
TWX: 910-223-3613

INDIANA

4002 Meadows Drive
Indianapolis 46205
Tel: (317) 546-4891
TWX: 810-341-3263

LOUISIANA

P.O. Box 856
1942 Williams Boulevard
Kenner 70062
Tel: (504) 721-6201
TWX: 810-955-5524

MARYLAND

6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX: 710-862-0850

MASSACHUSETTS

P.O. Box 20007
Herndon Station 32814
621 Commonwealth Avenue
Orlando
Tel: (305) 841-3970
TWX: 810-850-0113

MICHIGAN

1702 Central Avenue
Albany 12205
Tel: (518) 869-8462

MINNESOTA

1219 Campville Road
Endicott 13760
Tel: (607) 754-0050
TWX: 510-252-0890

MISSOURI

9208 Wyoming Place
Kansas City 64114
Tel: (816) 333-2445
TWX: 910-771-2087

NEW JERSEY

391 Grand Avenue
Englewood 07631
Tel: (201) 567-3933
TWX: 710-991-9707

NEW MEXICO

P.O. Box 8366
Station C 87108
6501 Lomas Boulevard N.E.
Albuquerque
Tel: (505) 255-5586
TWX: 910-989-1665

NEW YORK

1219 Campville Road
Endicott 13760
Tel: (607) 754-0050
TWX: 510-252-0890

NEW ZEALAND

Sample Electronics (N.Z.) Ltd.
8 Matipo Street
Onehunga S.E. 5
Auckland
Tel: 667-356
Cable: ELPMAS Auckland

NETHERLANDS

Hewlett-Packard Benelux, N.V.
de Boelelaan 1043
Amsterdam, Z.2
Tel: 42 77 77
Cable: PALOBEN Amsterdam

NORWAY

Morgenstjerne & Co. A/S
Ingeniofirma
6 Wessels Gate
Oslo
Tel: 20 16 35
Cable: MOROF Oslo

PORTUGAL

Telectra
Rua Rodrigo da Fonseca 103
P.O. Box 2531
Lisbon 1
Tel: 68 60 72
Cable: TELECTRA Lisbon

SPAIN

Ataio Ingerieros
Urgel, 259
Barcelona, 11
Tel: 230-69-88

SWEDEN

HP Instrument AB
Hagakergatan 7
Möndal
Tel: 031 - 27 68 00

SWITZERLAND

HEWPAK AG
508 Tolland Street
Zürcherstrasse
8952 Schlieren
Zürich
Tel: (051) 98 18 21
Cable: HEWPAKAG Zurich

TURKEY

Telekom Engineering Bureau
P.O. Box 376 - Galata
Istanbul
Tel: 49 40 40
Cable: TELEMATIION Istanbul

UNITED KINGDOM

Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks
Tel: (051) 98 18 21
Cable: HEWPAKAG Zurich

YUGOSLAVIA

Belram S.A.
83 avenue des Mimosas
Brussels 15, Belgium
Tel: 35 29 58
Cable: BELRAMEL Brussels

CONNECTICUT

508 Tolland Street
East Hartford 06108
Tel: (203) 289-9394
TWX: 710-425-3416

DELAWARE

3941 Kennett Pike
Wilmington 19807
Tel: (302) 655-6161
TWX: 810-666-2214

FLORIDA

Suite 106
9999 N.E. 2nd Avenue
Miami Shores 33138
Tel: (305) 758-3626
TWX: 810-848-7262

GEORGIA

P.O. Box 20007
Herndon Station 32814
621 Commonwealth Avenue
Orlando
Tel: (305) 841-3970
TWX: 810-850-0113

ILLINOIS

5508 Howard Street
Skokie 60076
Tel: (312) 677-0400
TWX: 910-223-3613

INDIANA

4002 Meadows Drive
Indianapolis 46205
Tel: (317) 546-4891
TWX: 810-341-3263

LOUISIANA

P.O. Box 856
1942 Williams Boulevard
Kenner 70062
Tel: (504) 721-6201
TWX: 810-955-5524

MARYLAND

6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX: 710-862-0850

MASSACHUSETTS

P.O. Box 20007
Herndon Station 32814
621 Commonwealth Avenue
Orlando
Tel: (305) 841-3970
TWX: 810-850-0113

MICHIGAN

1702 Central Avenue
Albany 12205
Tel: (518) 869-8462

MINNESOTA

1219 Campville Road
Endicott 13760
Tel: (607) 754-0050
TWX: 510

MANUAL CHANGES

DC POWER SUPPLY

Model 6217A

Manual Serial Number Prefix 7H

Make all corrections in the manual according to errata below, then check the following table for your power supply serial number and enter any listed change(s) in the manual.


SERIAL		MAKE CHANGES
Prefix	Number	
7H	0501 - 0700	1
7H	0701 - up	2

SERIAL		MAKE CHANGES
Prefix	Number	

CHANGE 1: Delete diode CR13 from parts list and schematic.

CHANGE 2: In the replaceable parts table, change diode CR13 to type 1N4830, G.E., ϕ Part No. 1901-0460. Also change R32 to 3K Ω , 2W, ϕ Part No. 0698-3642, and C9 to 400 μ f, ϕ Part No. 0180-1887.

 11-7-67



The information contained in this booklet is intended for the operation and maintenance of Harrison equipment and is not to be reproduced without written consent of:

Harrison Division of Hewlett-Packard Company

PATENT NOTICE

Patents have been applied for on circuits used in this power supply. Buyer is not licensed to reproduce drawings or to utilize the circuit without written permission from Harrison Division of Hewlett-Packard Company.

CLAIM FOR DAMAGE IN SHIPMENT

This equipment should be tested as soon as it is received. If it fails to operate properly or is damaged in any way, a claim should be filed with the carrier. A full report of the damage should be obtained by the claim agent, and this report should be forwarded to us. We will then advise you of the disposition which is to be made of the equipment and arrange for repair or replacement.

HARRISON DIVISION OF HEWLETT-PACKARD COMPANY

100 LOCUST AVENUE • BERKELEY HEIGHTS, NEW JERSEY 07922 • 464-1234 • AREA CODE 201 • TWX 201-464-2117

HEWLETT
PACKARD  HARRISON
DIVISION